

# ORDER INVOICE WITH ENGINEERING BREAKDOWN [9NR01482]

**FEBRUARY 02, 2019**

 For Help Desk Phone Numbers [Click here](#)


### Caution Ordering Parts from TMI Order Invoice with Engineering Breakdown

Order Invoice with Engineering Breakdown information is provided by the orders system, once you click breakdown of a part, TMI pulls the information from the Engineering Data System (EDS).

EDS is not a manufacturing bill of material system but a engineering part in effect system. TMI uses the built date and calls EDS to pull the part in effect at that time.

Recently, TMI added an as manufactured tab. This tab provides the consist as reported from the engine factory. This data is limited but growing for new manufactured engines. To see an example enter "WRH00104"

To validate you are ordering a correct part, TMI encourages you to contact Morton Parts. 800-566-7782 or [tech\\_support@cat.com](mailto:tech_support@cat.com)

The below option will email full breakdown of the serial number

Excel  PDF

FullBreakDown

Sales Model: 3306 DIT Invoice Number: GE 215720 Dealer: B170 S.O. Number: VPK0100 Invoice Date: 1997-01-17

[Part Numbers](#)



[Help](#)

## Part Numbers [Top](#)

74 results found, displaying 1 to 74

Reference Number	Eng Chg	Quantity	ASM	LESS	Set Type	Description	BreakDown...	Reference Drawing	SIS Part Diagram
CA0316	03	1	I			3306 480 VOLT 60 HZ PGS	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1284440	01	1	I			3306 DITAAC GEN SET ENG-BASIC	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 2N3322	04	1	I			SERVICE INDICATOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 2W8198	08	1	I			SOLENOID SHUTOFF - ETR 24 V	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 3L0432		1	I			TEST - PKG GEN SET (EMCP II)	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 3N7210	05	1	I			FAN DRIVE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 3N7211	02	1	I			FAN PULLEY 1:1 RATIO	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 4P7610	02	1	I			PICK UP GP - MAGNETIC	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 5N7147	02	1	I			FAN ADAPTER - BLOWER	<a href="#">BreakDown...</a>	<a href="#">Drawing...</a>	<a href="#">View Diagram</a>
- 5N7562	00	1	I			NOTE-CONTROL PANEL MTG (REAR)	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 5N7601		1	I			NOTE-CONTROL & POWER PANEL	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 5P2506	00	1	I			LITERATURE GP - ENGLISH	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 5P2586	03	1	I			OIL - BULK - ONE LITER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 6L2927	07	1	I			DRY ELBOW	<a href="#">BreakDown...</a>	<a href="#">Drawing...</a>	<a href="#">View Diagram</a>
- 7C7463	02	1	I			BLOWER FAN	<a href="#">BreakDown...</a>	<a href="#">Drawing...</a>	<a href="#">View Diagram</a>
- 7C8298	00	1	I			LINES GP - AIR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7E1216	03	1	I			GUARD GP - FAN BSC	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7E4268	00	1	I			CLEANER GP - AIR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7N8756	02	1	I			LINES GP-AIR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 8N0888	10	1	I			REGULATOR GP-HSG &	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 9L5065	07	1	I			ELECTRIC STARTING MOTOR - 24V	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>

74 results found, displaying 1 to 74

Reference Number	Eng Chg	Quantity	ASM	LESS 	Set Type	Description	BreakDown...	Reference Drawing	SIS Part Diagram 
- 9Y1509	02	1	I			GUARD GP - AIR LINES	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 9Y3667	03	1	I			BELT TIGHTENER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1029976	00	1	I			MOUNTING GP - CONTACTOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1031949	02	1	I			WIRING GP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1036101	02	1	I			CONTROL GP -A	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1044704	03	1	I			MTG GP - CONTROL PNL (EMCP II)	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1121509	02	1	I			DISPOSAL GP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1279311	00	1	I			STANDARD BASE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1296803	03	1	I			CONNECTION GP - ELECTRICAL	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1297502	01	1	I			LINES GP - DRAIN - COOLANT	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1297503	01	1	I			LINES GP - DRAIN	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1282588	00	1	I			RADIATOR GP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
CA0367	00	1	I			GENERATOR REMOVAL	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
CA0349	00	1	I			GENERATOR 446 FRAME PM	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1093319	02	1	I			INSTALLATION ARRANGEMENT	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1291494	00	1	I			GENERATOR 446 FRAME PM	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1303480	00	1	I			MOUNTING GP - REGULATOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1303649	00	1	I			REGULATOR GP - VOLTAGE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
9Y8156		1	I			STANDBY POWER APPLICATION	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
CA0561	00	1	I			LONG LIFE COOLANT/ANTIFREEZE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1195148	01	1	I			COOLANT-LONG LIFE-BULK-1 LITER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1113794	00	1	I			COOLANT LEVEL SENSOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1121171	01	1	I			WATER SEPARATOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
5N0410	04	1	I			FLEXIBLE FUEL LINES	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
PA5015	02	1	I			1724 ELECTRONIC GOVERNOR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7E0598	00	1	I			ACTUATOR GP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 9Y6375	02	1	I			MOUNTING GP - ACTUATOR-1724	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1315455	00	1	I			CONTROL AS	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
CA0455	00	1	I			JACKET WATER HEATER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7E6247	02	1	I			JACKET WATER HEATER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1294438	01	1	I			MOUNTING GP - JW HEATER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1214716	00	1	I			ALARM MODULE - NFPA 99	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1311963	01	1	I			CUSTOM REM. ANNUNCIATOR MODULE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
9Y6496	02	1	I			CUSTOMER INTERFACE MODULE-CIM	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1214712	01	1	I			PANEL LIGHTS/AUXILIARY RELAY	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
1341157	00	1	I			ENGINE FAILURE RELAY	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
5N7595		1	I			NOTE - MOUNT CIRCUIT BKR RH	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
CA0412	01	1	I			CIRCUIT BREAKER W/ST 400 AMP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 6I3340	00	1	I			BAR AS-NEUTRAL-800 AMP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1057185	00	1	I			WIRING GP	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1119703	00	1	I			BREAKER GP - CKT	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1295841	00	1	I			COVER GP-EXTENSION BOX	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1301969	01	1	I			MOUNTING GP - CIRCUIT BREAKER	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1302572	00	1	I			BOX GP - EXTENSION	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 1302569	00	1	I			FASTENER GP-EXT BOX	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
0P9715		1	I			EXTRA LITERATURE - ENGLISH	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
0P8910		1	I			____-____ POST SALE SPAR	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
0P8709		1	I			STANDBY ALLOW PGM - PGM 344	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
0P9883		1	I			0P9883 STANDBY PLUS PGM 344	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
PP3522	02	1	I			377 BHP 258 GEN KW WOF 60 HZ S	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 2T8328	00	1	I			281 KW @ 1800 RPM (377 BHP)	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 5N7545		1	I			NOTE-REM STD GOV.SPRG-HI IDLE	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>
- 7N1295	01	1	I			SPRING-GOV	<a href="#">BreakDown...</a>		<a href="#">View Diagram</a>

2/2/2019

Order Invoice with Engineering Breakdown

Content Owner: Commercial Processes Division  
Web Master(s): [PSG Web Based Systems Support](#)  
Current Date: 2/2/2019, 11:11:29 AM  
© Caterpillar Inc. 2019 All Rights Reserved.  
[Data Privacy Statement](#).