#### **CSDG – 1500kw**

## Central States Diesel Generator

**CUMMINS / DQGAB 1500** 



## **Cummins Sales and Service**

## NOTICE

A COPY OF THIS GENERATOR SET SUBMITTAL MUST BE RETURNED TO OUR OFFICE, APPROVED IN ITS ENTIRETY AND BEARING THE DATE OF APPROVAL, STAMP OR SIGNATURE AND TITLE OF THE APPROVING AUTHORITY, BEFORE ANY ITEM WILL BE RELEASED FOR MANUFACTURE OR SHIPMENT. WE ASSUME NO RESPONSIBILITY FOR DELAYS IN OUR FORECASTED SHIPPING SCHEDULES ON ANY ITEM ON WHICH SUBMITTAL APPROVAL IS BEYOND THIRTY (30) DAYS FROM THE SUBMISSION DATE ON THE COVER PAGE.

THIS SUBMITTAL IS BASED UPON OUR INTERPRETATION OF THE PROJECT REQUIREMENTS AND/OR SPECIFICATIONS AND IS IN ACCORDANCE WITH YOUR ORDER AND PRODUCT AVAILABILITY OF FROM OUR VENDORS. PLEASE REVIEW THE ENCLOSED DATA COMPLETELY AND CAREFULLY. SHOULD ADDITIONAL INFORMATION OR CLARIFICATION BE REQUIRED PLEASE FORWARD A SUBMITTAL COPY, COMPLETE WITH YOUR NOTATIONS, TO OUR OFFICE WITHIN THIRTY (30) DAYS FOR A PROMPT RESPONSE AND/OR RESUBMITTAL.

CONSIDERABLE ATTENTION IS GIVEN TO THE PREPARATION OF THIS SUBMITTAL TO ENSURE IT IS COMPLETE, CONCISE AND CORRECT AS IS POSSIBLE. PLEASE REVIEW IT CAREFULLY AND THOROUGHLY.

# **Cummins Sales and Service**



## **Table of Contents**

## CSDG – 1500kw

	Page
Cover Letter	1
Notice Letter	2
Table of Contents	3
Bill of Materials	4
Generator Specification Sheet	5-9
Generator Data Sheet	10-13
Generator PowerCommand Control - PCC 3.3	14-26
Generator Alternator Data Sheet	27-30
Prototype Test Certificate	31
Prototype Test Summary Report	32
Generator Open Unit Drawing	33-39
Generator Circuit Breaker Specification Sheet	40-42
Generator Circuit Breaker Drawing Generator	43-45
Coolant Heater Drawing Generator Battery	46
Charger Specification Sheet	47-49
Generator Annunciator Panel Specification Sheet	50-53
Generator Warranty Statement - 3 Year	54-55



#### Bill of Materials

Item	Description	Qty
1	DQGAB, Diesel Genset, 60Hz, 1500kW-Standby Rating	1
	U.S. EPA, Stationary Emergency Application	
	1500DQGAB, Diesel Genset, 60Hz, 1500kW	
	Emission Certification, EPA, Tier 2, NSPS CI Stationary Emergency Listing - UL 2200	
	IBC Seismic Certification	
	Duty Rating - Standby Power (ESP)	
	Voltage - 277/480, 3 Phase, Wye, 4 Wire Alternator - 60Hz, 3 Phase, Wye, Limited Range, 125C	
	Control Mounting - Right Facing	
	PowerCommand 3.3 Controller, Paralleling Capable	
	Paralleling-Isolated Bus, None Bus PT module. None	
	Control Display Language - English	
	Analog Meters - AC Output	
	LCD Čontrol Display AmpSentryTM UL Listed Protective Relay	
	Alarm - Audible, Engine Shutdown	
	Circuit Breaker or Entrance Box - Right And Left	
	Circuit Breaker - 2500A, Left, 3P, 600, IEC 415, UL Serv Ent, 100% Circuit Breaker - 1200A, Right, 3P, UL 600, IEC 415, UL Serv Ent, 100%	
	Fuel Filters - Engine, Single	
	Engine Starter - 24 Volt DC Motor	
	Battery Charging Alternator Engine Cooling - Radiator, High Ambient Air Temperature, Ship Fitted	
	Shutdown - Low Coolant Level	
	Coolant Heater - 208/240/480 Volts AC, 40F Below Ambient Temperature	
	Engine Air Cleaner - Normal Duty Engine Oil Filters, Full Flow with Bypass	
	Standby 3 Year 1500 Hour Parts+Labor+Travel	
	10A 24V Battery Charger	
	Annunciator	



# Diesel Generator Set QSK50 Series Engine

1100 kW - 1500 kW 60 Hz



#### **Description**

Cummins® commercial generator sets are fully integrated power generation systems providing optimum performance, reliability and versatility for stationary standby and prime power applications. Codes or standards compliance may not be available with all model configurations – consult factory for availability.

#### **Features**

**Cummins Heavy-Duty Engine -** Rugged 4-cycle, industrial diesel delivers reliable power, low emissions and fast response to load changes.

**Alternator -** Several alternator sizes offer selectable motor starting capability with low reactance 2/3 pitch windings; low waveform distortion with non-linear loads, fault clearing short-circuits capability.

**Permanent Magnet Generator (PMG) -** Offers enhanced motor starting and fault clearing short-circuit.

Control System - The PowerCommand® digital control is standard equipment and provides total genset system integration including automatic remote starting/stopping, precise frequency and voltage regulation, alarm and status message display, AmpSentry TM protective relay, output metering and auto-shutdown at fault detection and NFPA 110 Level 1 compliance

**Cooling System -** Standard integral setmounted radiator system, designed and tested for rated ambient temperatures, simplifies facility design requirements for rejected heat.

**NFPA** - The genset accepts full rated load in a single step in accordance with NFPA 110 for Level 1 systems.

**Warranty and Service -** Backed by a comprehensive warranty and worldwide distributor network.

	Standby Ra	iting	Prime Rating		Continuous Rating		Data Sheets	
Model	60 Hz kW (kVA)	50 Hz kW (kVA)	60 Hz kW (kVA)	50 Hz kW (kVA)	60 Hz kW (kVA)	50 Hz kW (kVA)	60 Hz	50 Hz
DQGAA	1250 (1563)		1100 (1375)				D-3333	
DQGAB	(1500) (1875)		1350 (1688)				D-3334	

#### **Generator Set Specifications**

Governor regulation class	ISO8528 Part 1 Class G3
Voltage regulation, no load to full load	± 0.5%
Random voltage variation	± 0.5%
Frequency regulation	Isochronous
Random frequency variation	± 0.25%
Radio frequency emissions compliance	IEC 801.2 through IEC 801.5: MIL STD 461C. Part 9

#### **Engine Specifications**

9	
Bore	158.8 mm (6.25 in.)
Stroke	158.8 mm (6.25 in.)
Displacement	50.3 Liters (3067 in³)
Configuration	Cast iron, V 16 cylinder
Battery capacity	1800 amps minimum at ambient temperature of 0 C (32 F)
Battery charging alternator	35 amps
Starting voltage	24 volt, negative ground
Fuel system	Cummins' Modular Common Rail System
Fuel filter	Dual Element 10 micron filtration spin-on fuel filter with 15 micron water separator
Air cleaner type	Dry replaceable element
Lube oil filter type(s)	Four spin-on, combination full flow filter and bypass filters
Standard cooling system	High ambient radiator

#### **Alternator Specifications**

Design	Brushless, 4 pole, drip-proof revolving field
Stator	2/3 pitch
Rotor	Single bearing, flexible disc
Insulation system	Class H
Standard temperature rise	150 °C standby at 40 °C ambient
Exciter type	PMG (Permanent Magnet Generator)
Phase rotation	A (U), B (V), C (W)
Alternator cooling	Direct drive centrifugal blower fan
AC waveform Total Harmonic Distortion (THDV)	< 5% no load to full linear load, < 3% for any single harmonic
Telephone Influence Factor (TIF)	< 50 per NEMA MG1-22.43
Telephone Harmonic Factor (THF)	< 3

#### **Available Voltages**

60 Hz Line-Neutra	al/Line-Line		50 Hz Line-Neutral/Line-Line
220/380 255/440	<b>277/480</b> 347/600	2400/4160	

<sup>\*</sup>Note: Consult factory for other voltages.

#### **Generator Set Options**

#### Engine

208/240/480 V thermostatically controlled coolant heater for ambient above 4.5 °C (40 °F) 208/240/480 V thermostatically controlled coolant heater for

ambient below 4.5 °C (40 °F) Dual 120 V 300 W lube oil heaters Dual 208/240 V 300 W lube oil heaters

Dual 480 V 300 W lube oil heaters

**Cooling System** 

Remote indicator

#### **Control Panel**

Multiple language support 120/240 V 100 W control anticondensation heater

Exhaust pyrometer

Ground fault indication Remote annunciator panel Paralleling relay package

Shutdown alarm relay package Audible engine shutdown alarm AC output analog meters (bargraph)

#### **Exhaust System**

Industrial grade exhaust silencer

Residential grade exhaust silencer Critical grade exhaust

silencer Exhaust packages

#### **Alternator**

80 ℃ rise 105 °C rise

120/240 V 300 W antiondensation heater

#### **Generator Set**

AC entrance box Battery

#### Battery charger Circuit breaker – se

Disconnect switch - set mounted

Remote annunciator panel Spring isolations 2 year warranty

5 year warranty 10 year major components warranty

<sup>\*</sup>Note: Some options may not be available on all models - consult factory for availability.

#### PowerCommand 3.3 - Control System



An integrated microprocessor-based generator set control system providing voltage regulation, engine protection, alternator protection, operator interface and isochronous governing. Refer to document S-1570 for more detailed information on the control.

**AmpSentry** – Includes integral AmpSentry protection, which provides a full range of alternator protection functions that are matched to the alternator provided.

**Power management** – Control function provides battery monitoring and testing features and smart starting control system.

**Advanced control methodology** – Three phase sensing, full wave rectified voltage regulation, with a PWM output for stable operation with all load types.

**Communications interface** – Control comes standard with PCCNet and Modbus interface.

**Regulation compliant** – Prototype tested: UL, CSA and CE compliant.

Service - InPower™ PC-based service tool available for detailed diagnostics, setup, data logging and fault simulation.

**Easily upgradeable** – PowerCommand controls are designed with common control interfaces.

**Reliable design** – The control system is designed for reliable operation in harsh environment.

#### Multi-language support

#### **Operator panel features**

#### Operator/display functions

- Displays paralleling breaker status
- Provides direct control of the paralleling breaker
- 320 x 240 pixels graphic LED backlight LCD
- Auto, manual, start, stop, fault reset and lamp test/panel lamp switches
- Alpha-numeric display with pushbuttons
- LED lamps indicating genset running, remote start, not in auto, common shutdown, common warning, manual run mode, auto mode and stop

#### Paralleling control functions

- First Start Sensor™ system selects first genset to close to bus
- Phase lock loop synchronizer with voltage matching
- Sync check relay
- Isochronous kW and kVar load sharing
- Load govern control for utility paralleling
- Extended paralleling (base load/peak shave) mode
- Digital power transfer control, for use with a breaker pair to provide open transition, closed transition, ramping closed transition, peaking and base load functions.

#### Alternator data

- Line-to-Neutral and Line-to-Line AC volts
- 3-phase AC current
- Frequency
- kW, kVAr, power factor kVA (three phase and total)

#### **Engine data**

- DC voltage
- Engine speed
- · Lube oil pressure and temperature
- Coolant temperature
- Comprehensive FAE data (where applicable)

#### Other data

- · Genset model data
- Start attempts, starts, running hours, kW hours
- Load profile (operating hours at % load in 5% increments)
- Fault history
- Data logging and fault simulation (requires InPower)

#### Standard control functions

#### **Digital governing**

- Integrated digital electronic isochronous governor
- Temperature dynamic governing

#### Digital voltage regulation

- Integrated digital electronic voltage regulator
- 3-phase, 4-wire Line-to-Line sensing
- · Configurable torque matching

#### **AmpSentry AC protection**

- AmpSentry protective relay
- Over current and short circuit shutdown
- Over current warning
- Single and three phase fault regulation
- Over and under voltage shutdown
- Over and under frequency shutdown
- Overload warning with alarm contact
- Reverse power and reverse Var shutdown
- Field overload shutdown

#### **Engine protection**

- · Battery voltage monitoring, protection and testing
- Overspeed shutdown
- · Low oil pressure warning and shutdown
- High coolant temperature warning and shutdown
- Low coolant level warning or shutdown
- Low coolant temperature warning
- Fail to start (overcrank) shutdown
- Fail to crank shutdown
- Cranking lockout
- Sensor failure indication
- Low fuel level warning or shutdown
- Fuel-in-rupture-basin warning or shutdown
- Full authority electronic engine protection

#### **Standard Control Functions (continued)**

#### **Control Functions**

- Time delay start and cool down
- · Real time clock for fault and event time stamping
- Exerciser clock and time of day start/stop
- Data logging
- · Cycle cranking
- Load shed
- Configurable inputs and outputs (4)
- Remote emergency stop

#### **Options**

• Auxiliary output relays (2)

#### **Ratings Definitions**

#### **Emergency Standby Power (ESP)**:

Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utility source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

#### Limited-Time Running Power (LTP):


Applicable for supplying power to a constant electrical load for limited hours. Limited-Time Running Power (LTP) is in accordance with ISO 8528.


#### Prime Power (PRP):

Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capability is available in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

#### Base Load (Continuous) Power (COP):

Applicable for supplying power continuously to a constant electrical load for unlimited hours. Continuous Power (COP) in accordance with ISO 8528, ISO 3046, AS 2789, DIN 6271 and BS 5514.

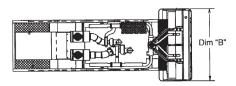

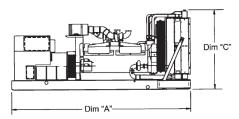


This outline drawing is for reference only. See respective model data sheet for specific model outline drawing number.

#### Do not use for installation design

Model	Dim 'A' (mm) (in.)	Dim 'B' (mm) (in.)	Dim 'C' (mm) (in.)	Set Weight dry* kg (lbs)	Set Weight* wet kg (lbs)
DQGAA	5969 (235)	2007 (79)	2840 (112)	10989 (24220)	11493 (25330)
DQGAB	5969 (235)	2007 79)	2840 (112)	10989 (24220)	11493 (25330)

\* Note: Weights represent a set with standard features. See outline drawings for weights of other configurations.

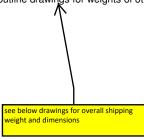

## Codes and Standards

ISO 9001	certified to ISO 9001 and manufactured in facilities certified to ISO 9001 or ISO 9002.  The Prototype Test Support (PTS) program	ŰL	2200, Stationary Engine Generator Assemblies for all 60 Hz low voltage models. The PowerCommand control is Listed to UL 508 – Category NITW7 for U.S and Canadian usage. Circuit breaker assemblies are UL 489 Listed for 100% continuous operation and also UL 869A Listed Service Equipment.  Engine certified to Stationary Emergency
The state of the s	verifies the performance integrity of the generator set design. Cummins products bearing the PTS symbol meet the prototype test requirements of NFPA 110 for Level 1 systems.	U.S EPA	U.S. EPA New Source Performance Standards, 40 CFR 60 subpart IIII Tier 2 exhaust emission levels. U.S. applications must be applied per this EPA regulation.
<b>1</b>	All low voltage models are CSA certified to product class 4215-01.	International Building Code	The generator set package set is available certified for seismic application in accordance with the following International Building Code: IBC2000, IBC2003, IBC2006 and IBC2009.

For more information contact your local Cummins distributor or visit power.cummins.com





#### Generator set data sheet



Model: DQGAB (60 Hz) (Fuel type: Diesel)

KW rating: 1500 standby 1350 prime

Emissions level: EPA NSPS Stationary Emergency Tier 2

Exhaust emission data sheet:	EDS-1059
Exhaust emission compliance sheet:	EPA-1093
Sound performance data sheet:	MSP-1034
Cooling performance data sheet:	MCP-152
Prototype test summary data sheet:	PTS-265
Standard set-mounted radiator cooling outline:	0500-4357
Optional remote radiator cooling outline:	0500-4309

	(Standby)			Prime				
Fuel consumption	kW (k)	/A)			kW (k)	/A)		
Ratings	1500 (1	1500 (1875)			1350 (1688)			
Load	1/4	1/2	3/4	Full	1/4	1/2	3/4	Full
US gph	35.4	58.2	81	103.8	33.1	53.6	74.2	94.7
L/hr	133.9	220.3	306.6	393	125.3	203	208.7	358.4

	(Standby)	Prime				
Engine	rating	rating				
Engine manufacturer	Cummins Inc.	Cummins Inc.				
Engine model	QSK50-G4 NR2					
Configuration	Cast iron, V 16 cylir	nder				
Aspiration	Turbocharged and	low temperature aftercooled				
Gross engine power output, kWm (bhp)	1656 (2220)	1470 (1971)				
BMEP at set rated load, kPa (psi)	2192 (318)	1957 (284)				
Bore, mm (in)	159 (6.25)	159 (6.25)				
Stroke, mm (in)	159 (6.25)					
Rated speed, rpm	1800					
Piston speed, m/s (ft/min)	9.5 (1875)					
Compression ratio	15:1					
Lube oil capacity, L (qt)	235 (248)					
Overspeed limit, rpm	2100 ±50					
Regenerative power, kW	168	168				
Maximum fuel flow, L/hr (US gph)	912 (241)	912 (241)				
Maximum fuel inlet restriction, kPa (in Hg)	16.9 (5)	16.9 (5)				
Maximum fuel inlet temperature, °C (°F)	71 (160)	71 (160)				

Air	(Standby) (rating)	Prime rating
Combustion air, m³/min (scfm)	139 (4895)	133 (4700)
Maximum air cleaner restriction, kPa (in H <sub>2</sub> O)	3.7 (15)	
Alternator cooling air, m³/min (cfm)	207 (7300)	

#### Exhaust

Exhaust flow at set rated load, m <sup>3</sup> /min (cfm)	342 (12065)	312 (11000)
Exhaust temperature, °C (°F)	491 (915)	446 (835)
Maximum back pressure, kPa (in H <sub>2</sub> O)	6.78 (27)	

## Standard set-mounted radiator cooling

Ambient design, °C (°F)	40 (104)	
Fan load, kW <sub>m</sub> (HP)	45 (60)	
Coolant capacity (with radiator), L (US gal)	541 (143)	
Cooling system air flow, m <sup>3</sup> /min (scfm)	1705 (60150)	
Total heat rejection, MJ/min (Btu/min)	72.3 (68580)	64.8 (61510)
Maximum cooling air flow static restriction, kPa (in H <sub>2</sub> O)	0.12 (0.5)	
Maximum fuel return line restriction kPa (in Hg)	34 (10)	

#### Optional remote radiator cooling<sup>1</sup>

Set coolant capacity, L (US gal)		
Max flow rate at max friction head, jacket water circuit, L/min (US gal/min)	1893 (500)	
Max flow rate at max friction head, aftercooler circuit, L/min (US gal/min)	537 (142)	
Heat rejected, jacket water circuit, MJ/min (Btu/min)	35.44 (33610)	32.11 (30455)
Heat rejected, aftercooler circuit, MJ/min (Btu/min)	26.93 (25545)	23.96 (22725)
Heat rejected, fuel circuit, MJ/min (Btu/min)		
Total heat radiated to room, MJ/min (Btu/min)	13.1 (12420)	11.9 (11275)
Maximum friction head, jacket water circuit, kPa (psi)	67 (10)	
Maximum friction head, aftercooler circuit, kPa (psi)	48 (7)	
Maximum static head, jacket water circuit, m (ft)	18.3 (60)	
Maximum static head, aftercooler circuit, m (ft)	18.3 (60)	
Maximum jacket water outlet temp, °C (°F)	104 (220)	100 (212)
Maximum aftercooler inlet temp at 25 °C (77 °F) ambient, °C (°F)	49 (120)	
Maximum aftercooler inlet temp, °C (°F)	71 (160)	66 (150)
Maximum fuel flow, L/hr (US gph)	469 (124)	
Maximum fuel return line restriction, kPa (in Hg)	34 (10)	

### Weights<sup>2</sup>

3			see below drawings for overall shipping	
Unit dry weight kgs (lbs)	12700 (28000)	$\leftarrow$	weight and dimensions	
Unit wet weight kgs (lbs)	13270 (29260)			

#### Notes:

<sup>&</sup>lt;sup>1</sup> For non-standard remote installations contact your local Cummins Power Generation representative. <sup>2</sup> Weights represent a set with standard features. See outline drawing for weights of other configurations.

#### **Derating factors**

(Standby)	Full rated power available up to 1134.0m (3719.6 ft) elevation at ambient temperatures up to 40 °C (104 °F). Full rated power available up to 702.5m (2304.2 ft) elevation at ambient temperatures up to 50 °C (120 °F). Above these conditions derate by 6.6% per 305m (1000 ft) and derate by an additional 10.3% per 10 °C (18 °F).
Prime	Full rated power available up to 1334.9m (4378.6 ft) elevation at ambient temperatures up to 40 °C (104 °F). Above these conditions derate by 5.8% per 305m (1000 ft) and derate by an additional 14.0% per 10 °C (18 °F).

#### Ratings definitions

Emergency standby power (ESP):	Limited-time running power (LTP):	Prime power (PRP):	Base load (continuous) power (COP):
Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utility source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.	Applicable for supplying power to a constant electrical load for limited hours. Limited Time Running Power (LTP) is in accordance with ISO 8528.	Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capability is available in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.	Applicable for supplying power continuously to a constant electrical load for unlimited hours. Continuous Power (COP) is in accordance with ISO 8528, ISO 3046, AS 2789, DIN 6271 and BS 5514.

#### Alternator data

	1	1	1	Single	Max	1	1	
		Temp rise		phase	surge	Winding	Alternator	Feature
Voltage	Connection <sup>1</sup>	degrees C	Duty <sup>2</sup>	factor <sup>3</sup>	kVA <sup>4</sup>	No.	data sheet	Code
380	Wye, 3-phase	125	Р		5743		ADS-332	B596-2
380	Wye, 3-phase	150/105	S/P		6716		ADS-333	B595-2
380	Wye, 3-phase	80	Р		6716		ADS-333	B687-2
380	Wye, 3-phase	105/80	S/P		7361		ADS-334	B599-2
380	Wye, 3-phase	80	S		7695		ADS-335	B660-2
440	Wye, 3-phase	125	Р		4602		ADS-330	B692-2
440	Wye, 3-phase	150/125	S/P		5521		ADS-331	B691-2
440	Wye, 3-phase	125/105	S/P		5743		ADS-332	B663-2
440	Wye, 3-phase	80	S		6716		ADS-333	B688-2
440	Wye, 3-phase	80	Р		7695		ADS-331	B689-2
480	Wye, 3-phase	105	Р		4602		ADS-330	B693-2
480	Wye, 3-phase	<b>125</b> /105	<mark>S</mark> /P		5521		ADS-331	B276-2
480	Wye, 3-phase	80	Р		5521		ADS-331	B694-2
480	Wye, 3-phase	105/80	S/P		5743		ADS-332	B600-2
480	Wye, 3-phase	80	S		6716		ADS-333	B601-2
600	Wye, 3-phase	105	Р		4602		ADS-330	B581-2
600	Wye, 3-phase	125/105	S/P		5521		ADS-331	B602-2
600	Wye, 3-phase	80	Р		5521		ADS-331	B695-2
600	Wye, 3-phase	105/80	S/P		5743		ADS-332	B603-2
600	Wye, 3-phase	80	S		6716		ADS-333	B604-2
4160	Wye, 3-phase	105	Р		6204		ADS-322	B312-2
4160	Wye, 3-phase	105/80	S/P		7005		ADS-323	B313-2

#### Notes:

<sup>&</sup>lt;sup>1</sup> Limited single phase capability is available from some three phase rated configurations. To obtain single phase rating, multipy the three phase kW rating by the Single Phase Factor<sup>3</sup>. All single phase ratings are at unity power factor.

<sup>&</sup>lt;sup>2</sup> Standby (S), Prime (P) and Continuous ratings (C).

<sup>&</sup>lt;sup>3</sup> Factor for the *Single Phase Output from Three Phase Alternator* formula listed below.

<sup>&</sup>lt;sup>4</sup> Maximum rated starting kVA that results in a minimum of 90% of rated sustained voltage during starting.

#### Formulas for calculating full load currents:

Three phase output Single phase output

kW x 1000 kW x SinglePhaseFactor x 1000

Voltage x 1.73 x 0.8 Voltage

Warning: Back feed to a utility system can cause electrocution and/or property damage. Do not connect to any building's electrical system except through an approved device or after building main switch is open.

North America 1400 73rd Avenue N.E. Minneapolis, MN 55432 USA

Phone 763 574 5000 Fax 763 574 5298

#### Our energy working for you.™

2015 Cummins Power Generation Inc. All rights reserved.

Cummins Power Generation and Cummins are registered trademarks of Cummins Inc. PowerCommand, AmpSentry, InPower and "Our energy working for you." are trademarks of Cummins Power Generation. Other company, product, or service names may be trademarks or service marks of others. Specifications are subject to change without notice.

D-3334k (6/15)





# PowerCommand® 3.3 Generator Set Digital Integrated Control System





Bargraph Optional

#### Introduction

The PowerCommand® 3.3 control system is a microprocessor-based generator set monitoring, metering, and control system, which is comprised of PowerCommand® Control 3300 and the Human Machine Interface 320. PCC3300 supports multiple operation modes including:

- Standalone,
- Synchronization only,
- Isolated bus paralleling,
- Utility single generator set paralleling,
- Utility multiple generator set paralleling,
- Utility single generator set paralleling with power transfer control (automatic mains failure).
- Isolated bus paralleling with Masterless Load Demand

PowerCommand® Control 3300 is designed to meet the exacting demands of the harsh and diverse environments of today's typical power generation applications for Full Authority Electronic or Hydromechanical engine power generator sets.

Offering enhanced reliability and performance over more conventional generator set controls via the integration of all generator control functions into a single system, PCC3300 is your Power of One generator set control solution.

#### **Benefits and Features**

- 320 x 240 pixels graphical LED backlit LCD
- Multiple languages supported
- AmpSentry<sup>™</sup> protection provides industryleading generator overcurrent protection
- Digital Power Transfer Control (Automatic Mains Failure) provides load transfer operation in open transition, closed transition, or soft (ramping) transfer modes

- Extended Paralleling (Peak Shave/Base Load) regulates the genset real and reactive power output while paralleled to the utility. Power can be regulated at either the genset or utility bus monitoring point
- Digital frequency synchronization and voltage matching
- Isochronous Load Sharing
- Droop kW and kVAr control
- Real time clock for fault and event time stamping
- Exerciser clock and time of day start/stop initiate a test with or without load, or a Base Load or Peak Shave session
- Digital automatic voltage regulation is provided using three phase sensing and full wave FET type regulator, which is compatible with either shunt or PMG excited systems with a standard AUX103 AVR or an option for a more powerful high-current field drive capability AUX106 AVR
- Digital engine speed governing is provided on applicable platforms
- Generator set monitoring (including metering) and protection with PCC3300 measuring voltage, current, kW and kVAr offering a measurement accuracy of 1%
- Utility / AC Bus metering and protection with PCC3300 voltage, current, kW and kVAr offering a measurement accuracy of 1%
- 12 V (DC) and 24 V (DC) battery operation
- RS-485 Modbus® interface for interconnecting to customer equipment
- Warranty and service Cummins Power Generation offers a comprehensive warranty and worldwide distributor service network
- Global regulatory certification and compliance: PCC3300 is suitable for use on gensets that are designed, manufactured, tested and certified to relevant UL, NFPA, ISO, IEC, Mil Std. and CE standards

## PowerCommand® Generator Set Digital Control System PCC 3300



#### Introduction

PCC3300 is an industry-leading digital generator set control suitable for usage on a wide range of diesel and lean burn natural gas generator sets in both standalone as well as paralleling applications.

PowerCommand® is compatible with either shunt or PMG excitation, and is suitable for usage with reconnectable or non-reconnectable generators. Configuration for any frequency, voltage and power connection from 120 V (AC) to 600 V (AC) line-to-line or 601 V (AC) to 45k V (AC) with an external PT is supported. The PCC3300 derives its own power from the generator set starting batteries and functions over a voltage range of 8 V (DC) to 30 V (DC).

#### **Features**

- PCC3300 supports configurable control features via software download using InPower PCcompatible software
- 12 V (DC) and 24 V (DC) battery operation
- Digital automatic voltage regulation is provided using three phase sensing and full wave FET type regulator, which is compatible with either shunt or PMG excited systems with a standard AUX103 AVR or an option for a more powerful high-current field drive capability AUX106 AVR
- Digital engine speed governing on applicable platform is provided, which is capable of providing isochronous frequency regulation
- Full authority J1939 CANBus® prime mover communications and control is provided for platforms with an Engine Control Module (ECM)
- AmpSentry" protection provides industry-leading alternator overcurrent protection:
  - Time-based generator protection applicable to both line-to-line and line-to-neutral, that can detect an unbalanced fault condition and swiftly react appropriately. Balanced faults can also be detected by AmpSentry and appropriate acted upon.
  - Reduces the risk of Arc Flash due to thermal overload or electrical faults by inverse time protection

- Generator set monitoring offers status information for all critical prime mover and generator functions
- AC and DC digital generator set metering is provided. AC measurements are configurable for single or three phase sensing with PCC3300 measuring voltage, current, kW and kVAr offering a measurement accuracy of 1%
- Battery monitoring system continually monitors the battery output and warns of the potential occurrence of a weak battery condition
- Relay drivers for prime mover starter, fuel shutoff (FSO), glow plug/spark ignition power and switched B+ applications are provided
- Integrated generator set protection is offered to protect the prime mover and generator
- Real time clock for fault and event time stamping
- Exerciser clock and time of day start/stop initiate a test with or without load, or a Base Load or Peak Shave session
- Digital Power Transfer Control (Automatic Mains Failure) provides load transfer operation in open transition, closed transition, or soft (ramping) transfer modes
- Extended Paralleling (Peak Shave/Base Load) regulates the genset real and reactive power output while paralleled to the utility. Power can be regulated at either the genset or utility bus monitoring point
- Digital frequency synchronization and voltage matching
- Isochronous Load Sharing
- Droop kW and kVAr Control
- The synchronization check function provides adjustments for phase angle window, voltage window, frequency window and time delay
- Utility / AC Bus metering and protection with PCC3300 voltage, current, kW and kVAr offering a measurement accuracy of 1%
- Advanced serviceability is offered via InPower™, a PC-based software service tool
- PCC3300 is designed for reliable operation in harsh environments with the unit itself being a fully encapsulated module
- RS-485 ModBus interface for interconnecting to customer equipment
- Native on PCC3300: Four discrete inputs, two dry contact relay outputs and two low-side driver outputs are provided and are all configurable.
  - Optional extra PCC3300 input and output capability available via AUX101
- Warranty and service Cummins Power Generation offers a comprehensive warranty and worldwide distributor service network
- Global regulatory certification and compliance: PCC3300 is suitable for use on gensets that are designed, manufactured, tested and certified to relevant UL, NFPA, ISO, IEC, Mil Std. and CE standards

#### **Base Control Functions**

#### **HMI** capability

<u>Options</u>: Local and remote HMI320 options are available

<u>Operator adjustments</u>: The HMI320 includes provisions for many set up and adjustment functions.

<u>Genset hardware data</u>: Access to the control and software part number, genset rating in kVA and genset model number is provided from the HMI320 or InPower.

<u>Data logs</u>: Information concerning all of the following parameters is periodically logged and available for viewing; engine run time, controller on time, number of start attempts, total kilowatt hours, and load profile. (Control logs data indicating the operating hours at percent of rated kW load, in 5% increments. The data is presented on the operation panel based on total operating hours on the generator.)

<u>Fault history</u>: Provides a record of the most recent fault conditions with control date and time stamp. Up to 32 events are stored in the control non-volatile memory.

#### Alternator data

- Voltage (single or three phase line-to-line and lineto-neutral)
- Current (single or three phase)
- kW, kVAr, Power Factor, kVA (three phase and total)
- Frequency

For Lean Burn Natural Gas Engine applications:

- Alternator heater status
- Alternator winding temperature (per phase) as well as alternator drive end and non-drive end bearing

#### Utility/AC bus data

- Voltage (three phase line-to-line and line-to-neutral)
- Current (three phase and total)
- kW, kVAR, Power Factor, kVA (three phase and total)
- Frequency

<u>AmpSentry:</u> 3x current regulation for downstream tripping/motor inrush management. Thermal damage curve (3-phase short) or fixed timer (2 sec for 1-Phase Short or 5 sec for 2-Phase short).

#### Engine data

- Starting battery voltage
- Engine speed
- Engine temperature
- Engine oil pressure
- Engine oil temperature
- Intake manifold temperature
- Coolant temperature
- Comprehensive Full Authority Engine (FAE) data (where applicable)

## <u>Lean Burn Natural Gas (LBNG) application parameters</u> include:

- Safety shutoff valve status
- Valve proving status
- Downstream gas pressure
- Gas inlet pressure
- Gas mass flow rate
- Control valve position
- · Gas outlet pressure
- Manifold pressure and temperature
- Throttle position
- Compressor outlet pressure
- Turbo speed
- · Compressor bypass position
- Cylinder configuration (e.g., drive end and nondrive end configurations)
- Coolant pressure 1 and 2 as well as coolant temperature 1 and 2 for both HT/LT respectively
- Exhaust port temperature (up to 18 cylinders)
- Pre-filter oil pressure
- Exhaust back pressure
- Parent ECM internal temperature and isolated battery voltage
- Speed bias
- Child ECM internal temperature and isolated battery voltage
- Knock level, spark advance, and knock count (for up to 18 cylinders)
- Auxiliary supply disconnector status
- Engine heater status
- Coolant circulating pump status
- · Lube oil priming pump status
- Lube oil status
- Oil heater status
- Derate authorization status
- Start system status
- Ventilator fan status
- Ventilation louvre status
- Radiator fan status
- DC PSU status
- Start inhibit/enable status and setup

<u>Service adjustments</u> – The HMI320 includes provisions for adjustment and calibration of genset control functions. Adjustments are protected by a password. Functions include:

- Engine speed governor adjustments
- Voltage regulation adjustments
- Cycle cranking
- Configurable fault set up
- Configurable input and output set up
- Meter calibration
- Paralleling setup
- Display language and units of measurement

#### **Prime Mover Control**

<u>SAE-J1939 CAN</u> interface to full authority ECMs (where applicable). Provides data transfer between genset and engine controller for control, metering and diagnostics.

12 V (DC) or 24 V (DC) nominal battery voltage is supported by PCC3300 for normal operation.

<u>Temperature dependant prime mover governing dynamics:</u> This function is supported enabling the engine to be responsive when warm and more stable when operating at lower temperature via providing control and modification over electronic governing parameters as a function of engine temperature.

<u>Isochronous governing</u> is provided in order to control prime mover speed within  $\pm 0.25\%$  of nominal rated speed for any steady state load from no load to full load. During operation frequency drift should not exceed  $\pm 0.5\%$  of nominal frequency given a  $33^{\circ}$ C (or  $60^{\circ}$ F) chance in ambient temperature within an eighthour period.

<u>Droop electronic speed is governing</u> capability is natively offered by PCC3300 to permit droop from 0% to 10% between no load to full load.

Remote start capability is built into the PCC3300 as the unit accepts a ground signal from remote devices to automatically command the starting of the generator set as well as the reaching of rated speed, voltage and frequency or otherwise run at idle speed until prime mover temperature is adequate. The presence of a remote start signal shall cause the PCC3300 to leave sleep mode and return to normal power mode. PCC3300 supports an option for delayed start or stop.

Remote Start Integrity: In compliance with NEC2017 Start Signal Integrity standard — NFPA70 Article 700.10(D)(3), the remote start circuit from ATS to PCC3300 is continuously monitored for signal disturbance due to broken, disconnected or shorted wires via a configurable input. Loss of signal integrity results in activation of a remote start signal.

Remote and local emergency stopping capability: PCC3300 accepts ground signal from a locally or remoted mounted emergency stop switch to cause the generator set to immediately shutdown. The generator set is prevented from either running or cranking with the emergency stop switch engaged. If PCC3300 is in sleep mode, then the activation of any emergency stop switch shall return PCC3300 is normal powered state along with the activation of the corresponding shutdown and run-prevention states.

<u>Sleep mode:</u> PowerCommand 3.3 supports a configurable low current draw state, which is design with consideration to the needs of prime applications or others application without a battery charger (in order to minimize battery current drain).

<u>Automatic prime mover starting:</u> Any generator set controlled by PCC3300 is capable of automatic starting achieved via either magnetic pickup or main alternator output frequency. PCC3300 additionally supports

configurable glow plug control where applicable.

<u>Prime mover cycle cranking:</u> PCC3300 supports configurable starting cycles and rest periods. Built in starter protection are incorporated to prevent the operator from specifying a starting sequence that may be damaging.

Configurable time delay functionality: PCC3300 supports time delayed generator set starting and stopping (for cooldown). Permissible time delays are as follows (noting a default setting is 0 seconds):

- 1. Start delay: 0 seconds to 300 seconds prior to starting after receiving a remote start signal.
- 2. Stop delay: 0 seconds to 600 seconds prior to shut down after receiving a signal to stop in normal operation modes.

Lean Burn Natural Gas application specific parameters

PCC3300 supports prime mover inhibiting in order to permit application-specific processes (i.e. Auxiliaries) to be started first.

#### **Generator Control**

PCC3300 performs both Genset voltage sensing and Genset voltage regulation as follows:

- Voltage sensing is integrated into PCC3300 via three phase line-to-line sensing that is compatible with shunt or PMG excitation systems
- Automatic voltage regulation is accomplished by using a three phase fully rectified input and has a FET output for good motor starting capability.

Major features of generator control include:

<u>Digital output voltage regulation</u> - Capable of regulating output voltage to within +/-1.0% for any loads between no load and full load. Voltage drift will not exceed +/-1.5% for a 40 °C (104 °F) change in temperature in an eight-hour period. On engine starting or sudden load acceptance, voltage is controlled to a maximum of 5% overshoot over nominal level.

The automatic voltage regulator feature can be disabled to allow the use of an external voltage regulator.

<u>Droop voltage regulation</u> - Control can be adjusted to droop from 0-10% from no load to full load.

<u>Torque-matched V/Hz overload control</u> - The voltage roll-off set point and rate of decay (i.e. the slope of the V/Hz curve) is adjustable in the control.

<u>Fault current regulation</u> - PowerCommand<sup>®</sup> will regulate the output current on any phase to a maximum of three times rated current under fault conditions for both single phase and three phase faults. In conjunction with a permanent magnet generator, it will provide three times rated current on all phases for motor starting and short circuit coordination purpose.

<u>Cylinder Cut-off System (CCS)</u>: PCC 3300 supports Cylinder Cut-off System which is used to operate the engines on half bank at no load and light load conditions. CCS has below benefits on engine

performance- improved emission standards, improved fuel efficiency, reduced hydrocarbons, reduced white smoke, reduced wet stacking and higher exhaust temperature at light loads to improve turbocharger operations and catalyst performance.

Step Timing Control (STC): PCC 3300 supports STC functionality which is used to advance the engine timing of a hydro-mechanical engine during start up and light load conditions. During ADVANCED injection timing, it:

- Improves cold weather idling characteristics
- Reduces cold weather white smoke
- Improves light load fuel economy
- Reduces injector carboning

#### **Paralleling Functions**

First Start Sensor™ system — PowerCommand® provides a unique control function that positively prevents multiple gensets from simultaneously closing to an isolated bus under black start conditions. The First Start Sensor system is a communication system between the gensets that allows the gensets to work together to determine which genset is a system should be the first to close to the bus. The system includes an independent backup function, so that if the primary system is disabled the required functions are still performed.

**Synchronizing** — Control incorporates a digital synchronizing function to force the genset to match the frequency, phase and voltage of another source such as a utility grid. The synchronizer includes provisions to provide proper operation even with highly distorted bus voltage waveforms. The synchronizer can match other sources over a range of 60-110% of nominal voltage and -24 to +6 hertz. The synchronizer function is configurable for slip frequency synchronizing for applications requiring a known direction of power flow at instant of breaker closure or for applications where phase synchronization performance is otherwise inadequate.

Load sharing control – The genset control includes an integrated load sharing control system for both real (kW) and reactive (kVar) loads when the genset(s) are operating on an isolated bus. The control system determines kW load on the engine and kVar load on the alternator as a percent of genset capacity, and then regulates fuel and excitation systems to maintain system and genset at the same percent of load without impacting voltage or frequency regulation. The control can also be configured for operation in droop mode for kW or Kvar load sharing.

**Load govern control**— When PowerCommand<sup>®</sup> receives a signal indicating that the genset is paralleled with an infinite source such as a utility (mains) service, the genset will operate in load govern mode. In this mode the genset will synchronize and close to the bus, ramp to a pre-programmed kW and kVar load level, and then operate at that point. Control is adjustable for kW

values from 0-100% of standby rating, and 0.7-1.0 power factor (lagging). Default setting is 80% of standby and 1.0 power factor. The control includes inputs to allow independent control of kW and kVar load level by a remote device while in the load govern mode. The rate of load increase and decrease is also adjustable in the control. In addition, the control can be configured for operation in kW or kVAR load govern droop.

Load demand control – The control system includes the ability to respond to an external signal to initiate load demand operation. On command, the genset will ramp to no load, open its paralleling breaker, cool down, and shut down. On removal of the command, the genset will immediately start, synchronize, connect, and ramp to its share of the total load on the system.

**Sync check** – The sync check function decides when permissive conditions have been met to allow breaker closure. Adjustable criteria are: phase difference from 0.1-20 deg, frequency difference from 0.001-1.0 Hz, voltage difference from 0.5-10%, and a dwell time from 0.5-5.0 sec. Internally the sync check is used to perform closed transition operations. An external sync check output is also available.

Genset and utility/AC bus source AC metering – The control provides comprehensive three phase AC metering functions for both monitored sources, including: 3-phase voltage (L-L and L-N) and current, frequency, phase rotation, individual phase and totalized values of kW, kVAR, kVA and Power Factor; totalized positive and negative kW-hours, kVAR-hours, and kVA-hours. Three wire or four wire voltage connection with direct sensing of voltages to 600V, and up to 45kV with external transformers. Current sensing is accomplished with either 5 amp or 1 CT secondaries and with up to 10,000 amp primary. Maximum power readings are 32,000kW/kVAR/kVA.

Power transfer control – provides integrated automatic power transfer functions including source availability sensing, genset start/stop and transfer pair monitoring and control. The transfer/retransfer is configurable for open transition, fast closed transition (less than 100msec interconnect time), or soft closed transition (load ramping) sequences of operation. Utility source failure will automatically start genset and transfer load, retransferring when utility source returns. Test will start gensets and transfer load if test with load is enabled. Sensors and timers include:

<u>Under voltage sensor</u>: 3-phase L-N or L-L under voltage sensing adjustable for pickup from 85-100% of nominal. Dropout adjustable from 75-98% of pickup. Dropout delay adjustable from 0.1-30 sec.

Over voltage sensor: 3-phase L-N or L-L over voltage sensing adjustable for pickup from 95-99% of dropout. Dropout adjustable from 105-135% of nominal. Dropout delay adjustable from 0.5-120 sec. Standard configuration is disabled and is configurable to enabled in the field using the HMI or InPower service tools.

Over/Under frequency sensor: Center frequency adjustable from 45-65 Hz. Dropout bandwidth adjustable from 0.3-5% of center frequency beyond pickup bandwidth. Pickup bandwidth adjustable from 0.3-20% of center frequency. Field configurable to enable.

<u>Loss of phase sensor:</u> Detects out of range voltage phase angle relationship. Field configurable to enable.

<u>Phase rotation sensor:</u> Checks for valid phase rotation of source. Field configurable to enable.

<u>Breaker tripped:</u> If the breaker tripped input is active, the associated source will be considered as unavailable.

<u>Timers:</u> Control provides adjustable start delay from 0 - 300sec, stop delay from 0 - 800sec, transfer delay from 0-120sec, retransfer delay from 0-1800sec, programmed transition delay from 0-60sec, and maximum parallel time from 0-1800sec.

<u>Negative Sequence Current Protection:</u> PCC3300 supports this protection natively in order to determine if the generator is at any point was running subject to negative phase sequencing.

Breaker control – Utility and Genset breaker interfaces include separate relays for opening and closing breaker, as well as inputs for both 'a' and 'b' breaker position contacts and tripped status. Breaker diagnostics include Contact Failure, Fail to Close, Fail to Open, Fail to Disconnect, and Tripped. Upon breaker failure, appropriate control action is taken to maintain system integrity.

Exerciser clock –The exerciser clock (when enabled) allows the system to be operated at preset times in either test without load, test with load, or extended parallel mode. A Real Time Clock is built in. Up to 12 different programs can be set for day of week, time of day, duration, repeat interval, and mode. For example, a test with load for 1 hour every Tuesday at 2AM can be programmed. Up to 6 different exceptions can also be set up to block a program from running during a specific date and time period.

Extended paralleling – In extended paralleling mode (when enabled) the controller will start the genset and parallel to a utility source and then govern the real and reactive power output of the genset based on the desired control point. The control point for the real power (kW) can be configured for either the genset metering point ("Base Load") or the utility metering point ("Peak Shave"). The control point for the reactive power (kVAR or Power Factor) can also be independently configured for either the genset metering point or the utility metering point. This flexibility would allow base kW load from the genset while maintaining the utility power factor at a reasonable value to avoid


penalties due to low power factor. The System always operates within genset ratings. The control point can be changed while the system is in operation. Set points can be adjusted via hardwired analog input or adjusted through an operator panel display or service tool.

Application types – Controller is configured to operating in one of six possible application types. These topologies are often used in combinations in larger systems, with coordination of the controllers in the system either by external device or by interlocks provided in the control. Topologies that may be selected in the control include:


<u>Standalone:</u> Control provides monitoring, protection and control in a non-paralleling application.




<u>Synchronizer only:</u> control will synchronize the genset to other source when commanded to either via a hardwired or Modbus driven input.

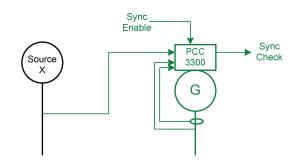


<u>Isolated Bus:</u> allows the genset to perform a dead bus closure or synchronize to the bus and isochronously share kW and kVAR loads with other gensets.

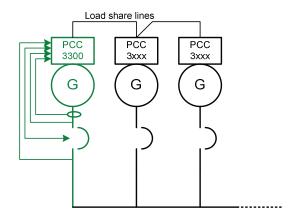


<u>Utility Single:</u> Control monitors one genset and utility. The control will automatically start and provide power to a load if the utility fails. The control will also resynchronize the genset back to the utility and provides extended paralleling capabilities.

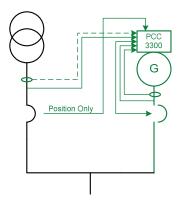

<u>Utility Multiple:</u> Supports all functionality of Isolated Bus and provides extended paralleling to the utility. Extended paralleling load set points follow a constant setting; dynamically follow an analog input, Modbus register or HMI.

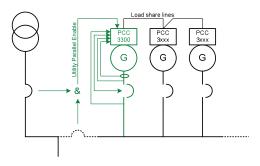


<u>Power Transfer Control</u>: Control operates a single genset/single utility transfer pair in open transition, fast closed transition, or soft closed transition. Extended paralleling functionality also provides base load and peak shave options.

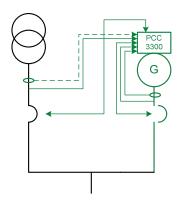


#### **Masterless Load Demand (Optional Feature):**

PowerCommand<sup>®</sup> 3.3 with Masterless Load Demand (MLD) technology enables generator sets to start/stop automatically based on load demand. Masterless Load Demand-capable generators are equipped with an additional s-CAN network connection that allows sharing of information amongst paralleled generator sets. MLD has been designed for hassle-free installation, commissioning and operation. MLD functionality. Integrated on-board system logic provides the MLD topology control without the need for any additional system.

## PowerCommand 3.3 MLD Application

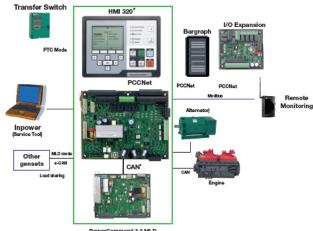

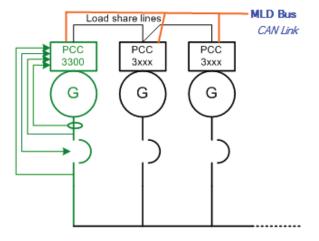

## PCC3300 External Voltage and Frequency Biasing Inputs

PCC3300 supports externally driven voltage and frequency biasing capability in order to permit external paralleling (if intending to use this feature please contact your local distributor for further information).

#### **Protective Functions**

On operation of a protective function the control will indicate a fault by illuminating the appropriate status LED on the HMI, as well as display the fault code and fault description on the LCD. The nature of the fault and time of occurrence are logged in the control. The service manual and InPower service tool provide service keys and procedures based on the service codes provided. Protective functions include:

#### Battle short mode

When enabled and the *battle short* switch is active, the control will allow some shutdown faults to be bypassed. If a bypassed shutdown fault occurs, the fault code and description will still be annunciated, but the genset will not shutdown. This will be followed by a *fail to shutdown* fault. Emergency stop shutdowns and others that are critical for proper operation (or are handled by the engine ECM) are not bypassed. Please refer to the Control Application Guide or Manual for list of these faults.

#### **Derate**

The Derate function reduces output power of the genset in response to a fault condition. If a Derate command occurs while operating on an isolated bus, the control will issue commands to reduce the load on the genset via contact closures or Modbus. If a Derate command occurs while in utility parallel mode, the control will actively reduce power by lowering the base load kW to the derated target kW.

#### Configurable alarm and status inputs

The control accepts up to four alarm or status inputs (configurable contact closed to ground or open) to indicate a configurable (customer-specified) condition.

The control is programmable for warning, derate, shutdown, shutdown with cooldown or status indication and for labeling the input.

#### **Emergency stop**

Annunciated whenever either emergency stop signal is received from external switch.

#### General prime mover protection

<u>Low and high battery voltage warning</u> - Indicates status of battery charging system (failure) by continuously monitoring battery voltage.

<u>Weak battery warning</u> - The control system will test the battery each time the genset is signaled to start and indicate a warning if the battery indicates impending failure.

<u>Low coolant level warning</u> – Can be set up to be a warning or shutdown.

<u>Low coolant temperature warning</u> – Indicates that engine temperature may not be high enough for a 10 second start or proper load acceptance.

<u>Fail to start (overcrank) shutdown</u> - The control system will indicate a fault if the genset fails to start by the completion of the engine crack sequence.

<u>Fail to crank shutdown</u> - Control has signaled starter to crank engine but engine does not rotate.

<u>Cranking lockout</u> - The control will not allow the starter to attempt to engage or to crank the engine when the engine is rotating.

<u>Fault simulation</u> –The control in conjunction with InPower software, will accept commands to allow a technician to verify the proper operation of the control and its interface by simulating failure modes or by forcing the control to operate outside of its normal operating ranges. InPower also provides a complete list of faults and settings for the protective functions provided by the controller.

#### For Lean Burn Natural Gas Engine applications:

Off load running (protection) – This feature protects the engine in the event the genset is being called to go off load for too long.

#### Hydro Mechanical fuel system engine protection:

<u>Overspeed shutdown</u> - Default setting is 115% of nominal

<u>Low lube oil pressure warning/shutdown</u> – Level is preset (configurable with InPower or HMI) to match the capabilities of the engine used. Control includes time delays to prevent nuisance alarms.

<u>High lube oil temperature warning/shutdown</u> – Level is preset (configurable with InPower or HMI) to match the capabilities of the engine used. Control includes time delays to prevent nuisance alarms.

<u>High engine temperature warning/shutdown</u> – Level is preset (configurable with InPower or HMI) to match the capabilities of the engine used. Control includes time delays to prevent nuisance alarms.

<u>Low coolant temperature warning</u> – Indicates that engine temperature may not be high enough for a 10 second start or proper load acceptance.


<u>High intake manifold temperature shutdown</u> – Level is preset (configurable with InPower or HMI) to match the capabilities of the engine used. Control includes time delays to prevent nuisance alarms.

#### Full authority electronic engine protection:

Engine fault detection is handled inside the engine ECM. Fault information is communicated via the SAE-J1939 data link for annunciation in the HMI.

#### **Alternator Protection**

AmpSentry protective relay - A comprehensive monitoring and control system integral to the PowerCommand® Control System that guards the electrical integrity of the alternator and power system by providing protection against a wide array of fault conditions in the genset or in the load. It also provides single and three phase fault current regulation (3x Current) so that downstream protective devices have the maximum current available to quickly clear fault conditions without subjecting the alternator potentially catastrophic failure conditions. Thermal damage curve (3 phase short) or fixed timer (2sec for 1P short, 5sec for 2P short). See document R1053 for a full-size time over current curve. The control does not included protection required for interconnection to a utility (mains) service.

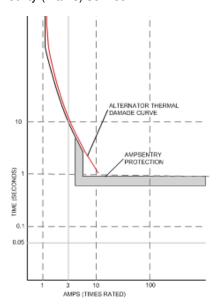

AmpSentry Maintenance Mode (AMM) - Instantaneous tripping, if AmpSentry Maintenance mode is active (50mS response to turn off AVR excitation/shutdown genset) for arc flash reduction when personnel are near genset.

High AC voltage shutdown (59) - Output voltage on any phase exceeds preset values. Time to trip is inversely proportional to amount above threshold. Values adjustable from 105-125% of nominal voltage, with time delay adjustable from 0.1-10 seconds. Default value is 110% for 10 seconds.

Low AC voltage shutdown (27) - Voltage on any phase has dropped below a preset value. Adjustable over a range of 50-95% of reference voltage, time delay 2-20 seconds. Default value is 85% for 10 seconds. Function tracks reference voltage. Control does not nuisance trip when voltage varies due to the control directing voltage to drop, such as during a V/Hz roll-off or synchronizing.

<u>Under frequency shutdown (81 u)</u> - Genset output frequency cannot be maintained. Settings are adjustable from 2-10 Hz below reference governor set point, for a 5-20 second time delay. Default: 6 Hz, 10 seconds. Under frequency protection is disabled when excitation is switched off, such as when engine is operating in idle speed mode.

Over frequency shutdown/warning (810) - Genset is operating at a potentially damaging frequency level. Settings are adjustable from 2-10 Hz above nominal governor set point for a 1-20 second time delay. Default: 6 Hz, 20 seconds, disabled.

Overcurrent warning/shutdown (51) - Implementation of the thermal damage curve with instantaneous trip level calculated based on current transformer ratio and application power rating.

<u>Loss of sensing voltage shutdown</u> - Shutdown of genset will occur on loss of voltage sensing inputs to the control.

<u>Field overload shutdown</u> - Monitors field voltage to shutdown genset when a field overload condition occurs.

Over load (kW) warning - Provides a warning indication when engine is operating at a load level over a set point. Adjustment range: 80-140% of application rated kW, 0-120 second delay. Defaults: 105%, 60 seconds.

Reverse power shutdown (32) - Adjustment range: 5-20% of standby kW rating, delay 1-15 seconds. Default: 10%, 3 seconds.

Reverse Var shutdown (40) - Shutdown level is adjustable: 15-50% of rated Var output, delay 10-60 seconds. Default: 20%, 10 seconds.

<u>Short circuit protection</u> - Output current on any phase is more than 175% of rating and approaching the thermal damage point of the alternator. Control includes algorithms to protect alternator from repeated over current conditions over a short period of time.

Negative sequence overcurrent warning (46) – Control protects the generator from damage due to excessive imbalances in the three phase load currents and/or power factors.

<u>Custom overcurrent warning/shutdown (51)</u> – Control provides the ability to have a custom time overcurrent protection curve in addition to the AmpSentry protective relay function.

<u>Ground fault overcurrent (51G)</u> – Control detects a ground fault either by an external ground fault relay via a contact input or the control can measure the ground current from an external current transformer. Associated time delays and thresholds are adjustable via InPower or HMI.

#### **Paralleling Protection**

Breaker fail to close Warning: When the control signals a circuit breaker to close, it will monitor the breaker auxiliary contacts and verify that the breaker has closed. If the control does not sense a breaker closure within an adjustable time period after the close signal, the fail to close warning will be initiated.

Breaker fail to open warning: The control system monitors the operation of breakers that have been signaled to open. If the breaker does not open within and adjustable time delay, a Breaker Fail to Open warning is initiated.

Breaker position contact warning: The controller will monitor both 'a' and 'b' position contacts from the breaker. If the contacts disagree as to the breaker position, the breaker position contact warning will be initiated.

<u>Breaker tripped warning:</u> The control accepts inputs to monitor breaker trip / bell alarm contact and will initiate a breaker tripped warning if it should activate.

<u>Fail to disconnect warning:</u> In the controller is unable to open either breaker, a fail to disconnect warning is initiated. Typically, this would be mapped to a configurable output, allowing an external device to trip a breaker.

<u>Fail to synchronize warning:</u> Indicates that the genset could not be brought to synchronization with the bus. Configurable for adjustable time delay of 10 -900 seconds, 120 default.

<u>Phase sequence sensing warning:</u> Verifies that the genset phase sequence matches the bus prior to allowing the paralleling breaker to close.

Maximum parallel time warning (power transfer control mode only): During closed transition load transfers, control independently monitors paralleled time. If time is exceeded, warning is initiated and genset is disconnected.

Bus or genset PT input calibration warning: The control system monitors the sensed voltage from the bus and genset output voltage potential transformers. When the paralleling breaker is closed, it will indicate a warning condition if the read values are different.

#### **Field Control Interface**

## Input signals to the PowerCommand<sup>®</sup> control include:

- Coolant level (where applicable)
- Fuel level (where applicable)
- Remote emergency stop
- Remote fault reset
- Remote start
- Rupture basin
- Start type signal
- Battle short
- Load demand stop
- Synchronize enable
- Genset circuit breaker inhibit
- Utility circuit breaker inhibit
- Single mode verify
- Transfer inhibit prevent transfer to utility (in power transfer control mode)
- Retransfer inhibit prevent retransfer to genset (in power transfer control mode)
- kW and kVAR load setpoints

Configurable inputs - Control includes (4) input signals from customer discrete devices that are configurable for warning, shutdown or status indication, as well as message displayed

## Input signals for Lean Burn Natural Gas Engine applications:

- Gearbox oil pressure/temperature protection
- Fire fault
- Earth fault support as a discrete input via an appropriate secondary detection device
- Differential fault
- DC power supply fault
- Genset Interface Box (GIB) isolator open fault
- Start inhibit/enable (x3)
- Radiator fan trip
- Ventilator fan trip
- Ventilation louvers closed
- Start system trip
- Alternator heater trip
- Alternator heater status
- Alternator winding temperature (PT100 RTDx3)
- Alternator drive end bearing temperature (PT100 RTD)
- Alternator non-drive end bearing temperature (PT100 RTD)

## Output signals from the PowerCommand® control include:

- Load dump signal: Operates when the genset is in an overload condition.
- Delayed off signal: Time delay-based output which will continue to remain active after the control has removed the run command. Adjustment range: 0 - 120 seconds. Default: 0 seconds.

- Configurable relay outputs: Control includes (4) relay output contacts (3 A, 30VDC). These outputs can be configured to activate on any control warning or shutdown fault as well as ready to load, not in auto, common alarm, common warning and common shutdown.
- Ready to load (genset running) signal: Operates when the genset has reached 90% of rated speed and voltage and latches until genset is switched to off or idle mode.
- Paralleling circuit breaker relays outputs: Control includes (4) relay output contacts (3.5A, 30 VDC) for opening and closing of the genset and utility breakers.


## Output Signals for Lean Burn Natural Gas Engine applications:

- Start inhibit/enable event
- Emergency stop event
- Ventilator fan run control
- Louvre control
- Radiator fan control
- Alternator heater control
- Engine at idle speed event

#### Communications connections include:

- PC tool interface: This RS-485 communication port allows the control to communicate with a personal computer running InPower software.
- Modbus RS-485 port: Allows the control to communicate with external devices such as PLCs using Modbus protocol.
  - Note An RS-232 or USB to RS-485 converter is required for communication between PC and control.
- Networking: This RS-485 communication port allows connection from the control to the other Cummins Power Generation products.

#### **Mechanical Drawing**

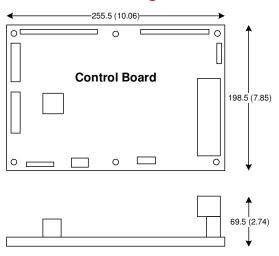

# PowerCommand® Human Machine Interface HMI320



#### **Description**

This control system includes an intuitive operator interface panel that allows for complete genset control as well as system metering, fault annunciation, configuration and diagnostics. The interface includes five genset status LED lamps with both internationally accepted symbols and English text to comply with customer's needs. The interface also includes an LED backlit LCD display with tactile feel soft-switches for easy operation and screen navigation. It is configurable for units of measurement and has adjustable screen contrast and brightness.

The *run/off/auto* switch function is integrated into the interface panel.

All data on the control can be viewed by scrolling through screens with the navigation keys. The control displays the current active fault and a time-ordered history of the five previous faults.

#### **Features:**


- LED indicating lamps
  - genset running
  - remote start
  - not in auto
  - shutdown
  - warning
  - auto
  - manual and stop
  - Circuit breaker open (if equipped)
  - Circuit breaker closed (if equipped)
- 320 x 240 pixels graphic LED backlight LCD.
- Four tactile feel membrane switches for LCD defined operation. The functions of these switches are defined dynamically on the LCD.
- Seven tactile feel membrane switches dedicated screen navigation buttons for up, down, left, right, ok, home and cancel.

- Six tactile feel membrane switches dedicated to control for auto, stop, manual, manual start, fault reset and lamp test/panel lamps.
- Two tactile feel membrane switches dedicated to control of circuit breaker (where applicable).
- Allows for complete genset control setup.
- Certifications: Suitable for use on gensets that are designed, manufactured, tested and certified to relevant UL, NFPA, ISO, IEC, Mil Std. and CE standards.
- Languages supported: English, Spanish, French, German, Italian, Greek, Portuguese, Finnish, Norwegian, Danish, Russian (Cyrillic), Chinese, Hungarian, Japanese, Polish, Korean, Romanian, Brazilian Portuguese, Turkish, Dutch, and Czech

#### Communications connections include:

- PC tool interface This RS-485 communication port allows the HMI to communicate with a personal computer running InPower.
- This RS-485 communication port allows the HMI to communicate with the main control board.

#### **Mechanical Drawing**

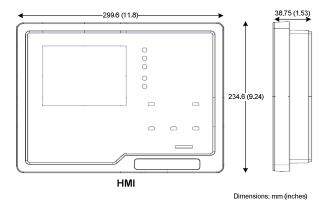

#### **Software**

InPower (beyond 6.5 version) is a PC-based software service tool that is designed to directly communicate to PowerCommand<sup>®</sup> gensets and transfer switches, to facilitate service and monitoring of these products.

#### **Environment**

The control is designed for proper operation without recalibration in ambient temperatures from -40  $^{\circ}$ C (-40  $^{\circ}$ F) to +70 $^{\circ}$ C (158  $^{\circ}$ F), and for storage from -55  $^{\circ}$ C (-67  $^{\circ}$ F) to +80  $^{\circ}$ C (176  $^{\circ}$ F). Control will operate with humidity up to 95%, non-condensing.

The HMI is designed for proper operation in ambient temperatures from -20 °C (-4 °F) to +70 °C (158 °F), and for storage from -30 °C (-22 °F) to +80 °C (176 °F).

The control board is fully encapsulated to provide superior resistance to dust and moisture. Display panel has a single membrane surface, which is impervious to effects of dust, moisture, oil and exhaust fumes. This panel uses a sealed membrane to provide long reliable service life in harsh environments.

The control system is specifically designed and tested for resistance to RFI/EMI and to resist effects of vibration to provide a long reliable life when mounted on a genset. The control includes transient voltage surge suppression to provide compliance to referenced standards.

#### **Certifications**

PowerCommand<sup>®</sup> meets or exceeds the requirements of the following codes and standards:

- NFPA 110 for level 1 and 2 systems.
- ISO 8528-4: 1993 compliance, controls and switchgear.
- CE marking: The control system is suitable for use on generator sets to be CE-marked.
- EN 50081-1,2 residential/light industrial emissions or industrial emissions.
- EN 50082-1,2 residential/light industrial or industrial susceptibility.
- ISO 7637-2, level 2; DC supply surge voltage test.
- Mil Std 202C, Method 101 and ASTM B117: Salt fog test
- UL 6200 recognized, suitable for use on UL 2200 Listed generator sets.
- CSA C282-M1999 compliance
- CSA 22.2 No. 14 M91 industrial controls.
- PowerCommand<sup>®</sup> control systems and generator sets are designed and manufactured in ISO 9001 certified facilities.
- ROHS (Restriction of Hazardous substance) complaint both for HMI 320 & PCC3300v2.

#### **Reference Documents**

Please refer to the following reference documents available in the PowerSuite library:

- PowerCommand™ 3.3. Application Guide
- T-037: PowerCommand Control Application Manual (ANSI Protective Functions)
- T-040: PowerCommand 3.3 Paralleling Application Guide

Please refer to the following reference documents available on Cummins Quickserve:

- Service Manuals for PC3.3 (non-MLD) and PC3.3 (MLD)
- Modbus Register Mapping

#### Warranty

All components and subsystems are covered by an express limited one-year warranty. Other optional and extended factory warranties and local distributor maintenance agreements are available.





#### Alternator data sheet

Characteristics

Weights: Stator assembly: 3186 lb 1445 kg

Rotor assembly: 2756 lb 1250 kg

Complete assembly: 6654 lb 3018 kg

Frame size: P734C

Maximum speed: 2250 rpm

**Excitation current:** Full load: 3.6 Amps

No load: 0.5 Amps

Insulation system: Class H throughout


modiation system.	010001	runougnou						
3 Ø Ratings (0.8	8 power factor)			60 Hz \	Voltage (v	vinding no)		
(Based on specific temperature ambient temperature)	e rise at 40° C	<u>220/380</u> (13)	240/416 (13)	220/380 (312)	240/416 (312)	254/440 (312)	277/480 (312)	347/600 (07)
163° C rise ratings	kW			1284	1456	1556	1620	1620
	kVA			1605	1820	1945	2025	2025
150° C rise ratings	kW			1248	1416	1512	1576	1576
	kVA			1560	1770	1890	1970	1970
125° C rise ratings	kW			1200	1364	1452	1512	1512
	kVA			1500	1705	1815	1890	1890
105° C rise ratings	kW			1116	1272	1352	1408	1408
	kVA			1395	1590	1690	1760	1760
80° C rise ratings	kW			1032	1172	1252	1300	1300
	kVA			1290	1465	1565	1625	1625
Reactances	per unit ± 10%)	220/380 (13)	240/416 (13)	220/380 (312)	240/416 (312)	254/440 (312)	277/480 (312)	347/600 (07)
(Based on full load at 125° C rise rating)								
Synchronous				4.06	3.86	3.67	3.21	2.96
Transient				0.25	0.23	0.22	0.19	0.21
Subtransient				0.18	0.17	0.16	0.14	0.14
Negative sequence				0.26	0.25	0.23	0.20	0.16
Zero sequence				0.03	0.03	0.03	0.03	0.02
Motor starting		220/380 (13)	240/416 (13)	220/380 (312)	240/416 (312)	254/440 (312)	277/480 (312)	347/600 (07)
Maximum kVA (90% sus	tained voltage)			5521	5521	5521	5521	5521
Time constants (sec)		<u>220/380</u> (13)	<u>240/416</u> (13)	220/380 (312)	240/416 (312)	<u>254/440</u> (312)	277/480 (312)	347/600 (07)
Transient				0.135	0.135	0.135	0.135	0.135
Subtransient				0.010	0.010	0.010	0.010	0.010
Open circuit				2.230	2.230	2.230	2.230	2.230
DC				0.020	0.020	0.020	0.020	0.020
Windings	(@ 20° C)	<u>220/380</u> (13)	<u>240/416</u> (13)	220/380 (312)	240/416 (312)	<u>254/440</u> (312)	277/480 (312)	347/600 (07)
Stator resistance (Line	to Line, Ohms)			0.00126	0.00126	0.00126	0.00126	0.00400
Rotor resistance	(Ohms)			1.85	1.85	1.85	1.85	1.85
Number of leads				6	6	6	6	6





# Winding 312 THREE PHASE EFFICIENCY CURVES


60 Hz

Frame size: P734C

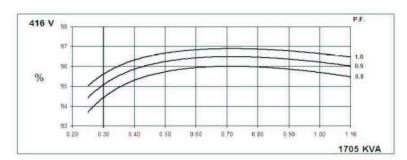

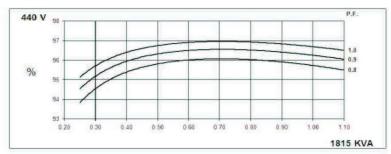

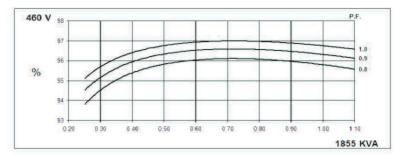

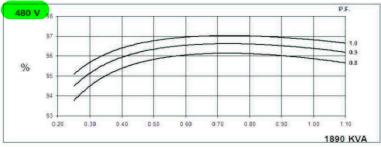



ADS-331



#### Winding 312

#### **Locked Rotor Motor Starting Curve**

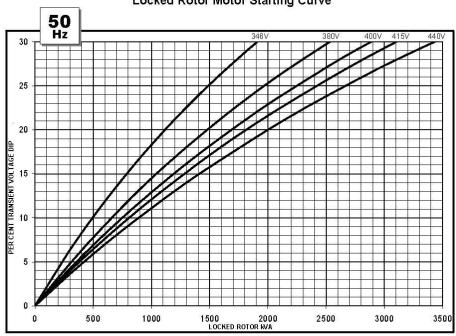

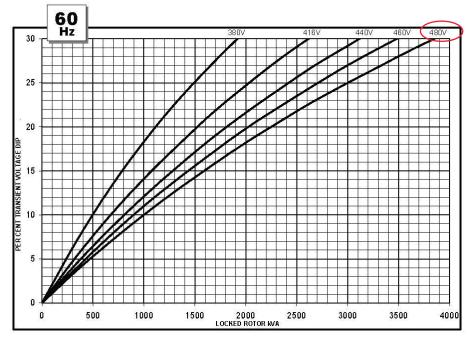

Frame size: P734C




#### Alternator data sheet


Frame size: P734C

Three-phase Short Circuit Decrement Curve. No-load Excitation at Rated Speed Based on star (wye) connection.



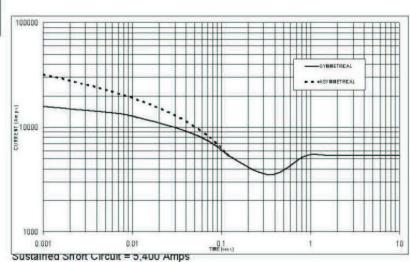



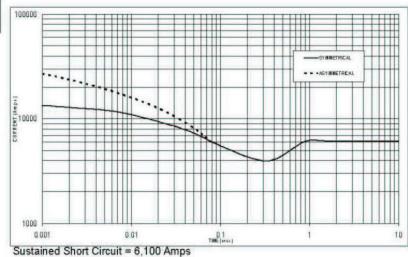

#### Note 1

The following multiplication factors should be used to adjust the values from curve between time 0.001 seconds and the minimum current point in respect of nominal operating voltage:

50	Hz	60	Hz
Voltage	Factor	Voltage	Factor
380v	x 1.00	416v	x 1.00
400v	x 1.05	440v	x 1.06
415v	x 1.09	460v	x 1.10
440v	x 1.16	480v	× 1.15

The sustained current value is constant irrespective of voltage level

#### Note 2

Note 3

The following multiplication factor should be used to convert the values calculated in accordance with NOTE 1 to those applicable to the various types of short circuit:

	3-phase	2-phase L-L	1-phase L-N		
Instantaneous	x 1.00	x 0.87	x 1.30		
Minimum	x 1.00	x 1.80	x 3.20		
Sustained	x 1.00	x 1.50	x 2.50		
Max. sustained duration	10 sec.	5 sec.	2 sec.		
All other to	mes are unch	anged	01		

Curves are drawn for Star (Wye) connected machines.



# Prototype Test Supported Emergency/Standby Generator Sets Certification



Cummins Power Generation certifies that its commercial generator sets bearing the Prototype Test Supported (PTS) seal have been subjected to a design and development process that includes extensive prototype testing and evaluation. A PTS production model is engineered and manufactured according to documentation developed through comprehensive research, design and design verification.

Design verification is based on tests of preproduction prototype models manufactured specifically for prototype test purposes and not sold as new equipment. To be certified as a PTS model, the generator set must satisfy these prerequisites:

**DESIGN** - The PTS certified generator set must be designed specifically for emergency/standby applications that require high reliability and rapid response.

**PROTOYPE TESTING** - Design suitability of the PTS certified generator set must be proven by tests on preproduction prototype models. The prototype test program is intended to:

- Confirm the engine and generator have reserve capacity beyond rating to minimize the potential of damage or shutdown during steady state or transient loading conditions, including momentary overloads.
- 2. Demonstrate generator set, controls and accessories capability to perform reliably and compatibly in service during disturbances common in actual load circuits.
- 3. Verify the integrity of the generator and excitation system insulation systems and electrical components to withstand heating under rated load and transient overcurrent conditions.
- 4. Evaluate generator set mechanical and electrical strength to perform without damage during abnormal operating conditions, such as short circuits or out-of-phase paralleling. While operating at rated load, the generator set must be subjected to several 3-phase short circuits of 20 second duration. After the tests, the generator set is inspected to verify that no electrical or mechanical damage was incurred by any components.
- 5. Determine by endurance testing that no resonance conditions exist in the generator set or accessories that will cause premature failure of components on production units.
- 6. Investigate and identify failure modes to minimize the risk of any single component failure or human error that could lead to lack of essential electrical supply.
- 7. Provide a margin of safety, by actual trials, between the generator set component design and protection systems so that the components are not damaged before the protective devices activate a shutdown.

**DOCUMENTATION AND SOFTWARE** - The PTS certified generator set must be documented in a single drawing package with all components identified with Cummins Power Generation part numbers. A PTS test certificate must be created for each PTS generator set certifying the PTS testing performed.

**QUALITY ASSURANCE** - Engineering drawings, specifications and test requirements for a PTS certified generator set must be classified by components and assembly quality characteristics. A component and process inspection and test plan must be developed and maintained to measure product conformance to documentation requirements.

**PRODUCTION MODEL TESTING** - PTS certified generator sets must be subjected to complete production tests that demonstrate conformance to specifications at all rated conditions, including start-up, full load pickup and a performance run at full rated load and power factor.



## PROTOTYPE TEST SUPPORT (PTS) 60 HZ TEST SUMMARY

GENERATOR SET MODELS
1250DQGAA
1500DQGAB

REPRESENTATIVE PROTOTYPE Model:1500DQGAB Alternator: P734C

Engine: QSK50-G4 NR2



The following summarizes prototype testing conducted on the designated representative prototype of the specified models. This testing is conducted to verify the complete generator set electrical and mechanical design integrity. Prototype testing is conducted only on generator sets not sold as new equipment.

#### Maximum Surge Power: 1580 kW

The generator set was evaluated to determine the stated maximum surge power.

#### **Torsional Analysis and Testing:**

The generator set was tested to verify that the design is not subjected to harmful torsional stresses. A spectrum analysis of the transducer output was conducted over the speed range of 1200 to 2000 RPM.

Cooling System: 40 °C Ambient

0.5 in. H2O restriction

The cooling system was tested to determine ambient temperature and static restriction capabilities. The test was performed at full rated load in elevated ambient temperature under stated static restriction conditions.

#### **Electrical and Mechanical Strength:**

The generator set was tested to several single phase and three phase faults to verify that the generator can safely withstand the forces associated with short circuit conditions. The generator set was capable of producing full rated output at the conclusion of the testing.

#### **Steady State Performance:**

The generator set was tested to verify steady state operating performance was within the specified maximum limits.

Voltage Regulation: ±0.50%
Random Voltage Variation: ±0.50%
Frequency Regulation: Isochronous
Random Frequency Variation: ±0.25%

#### **Transient Performance:**

The generator set was tested with the standard alternator to verify single step loading capability as required by NFPA 110. Voltage and frequency response on load addition or rejection were evaluated. The following results were recorded:

Full	Load	Acceptance:	

Voltage Dip:	40.4	%
Recovery Time:	4.2	Second
Frequency Dip:	7.5	%
Recovery Time:	5.6	Second
Full Load Rejection:		
Voltage Rise:	26.4	%
Recovery Time:	2.8	Second
Frequency Rise:	3.5	%
Recovery Time:	1.3	Second

#### **Harmonic Analysis:**

(per MIL-STD-705B, Method 601.4)

Line to Line

<u>Harmonic</u>	No Load	Full Load	No Load	Full Load	
3	0.18	0.01	0.13	0.08	
5	0.2	2.3	0.13	2.3	
7	0.52	1.46	0.48	0.74	
9	0.08	0.03	0.03	0.07	
11	0.65	0.49	0.64	0.46	ı
13	0.21	0.28	0.19	0.31	

0.05


0.05

15

0.1

Line to Neutral

0.03

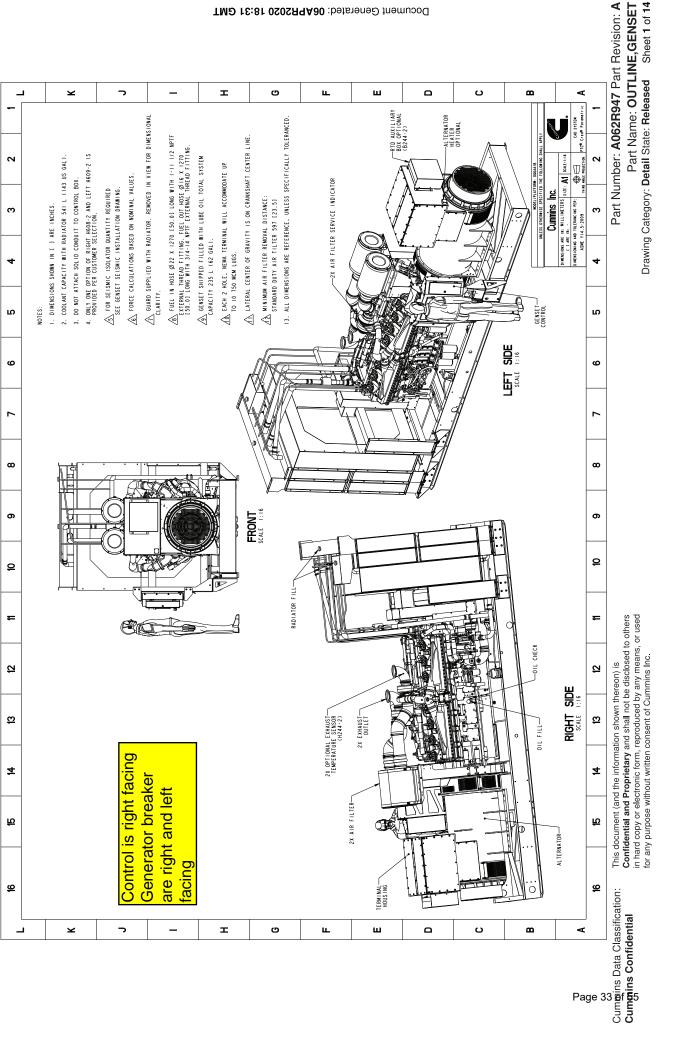

This document (and the information shown thereon) is **Confidential and Proprietary** and shall not be disclosed to others in hard copy or electronic form, reproduced by any means, or used for any purpose without written consent of Cummins Inc.

Sheet 1 of 14 Part Name: OUTLINE, GENSET Drawing Category: Detail State: Released


Part Name: **OUTLINE, GENSET** stail State: **Released** Sheet 2 of 14 Drawing Category: Detail State: Released

Se Summins Data Classification:

Cummins Confidential


Part Name: **OUTLINE, GENSET** stail State: **Released** Sheet 3 of 14

Drawing Category: Detail State: Released

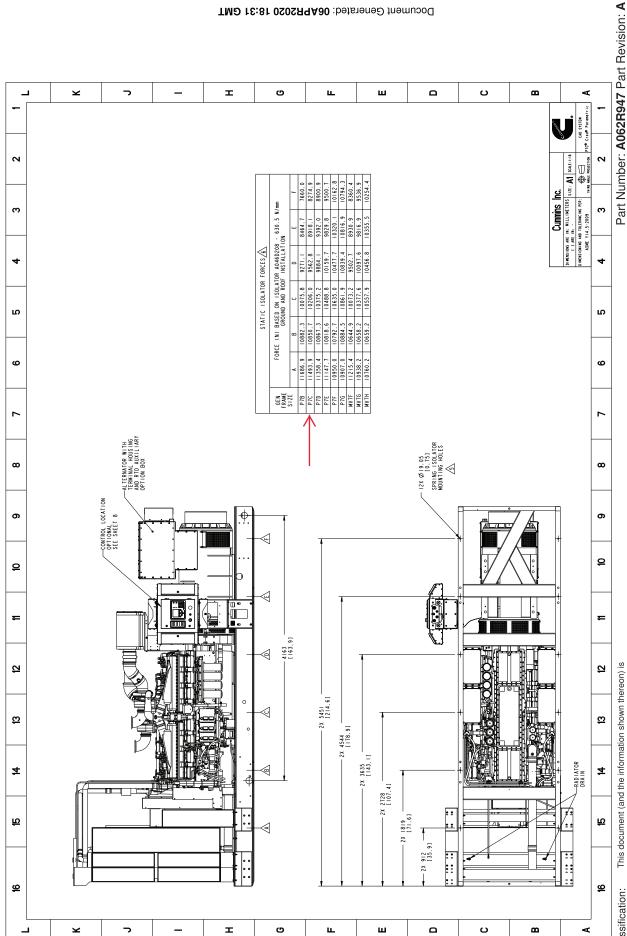


This document (and the information shown thereon) is **Confidential and Proprietary** and shall not be disclosed to others in hard copy or electronic form, reproduced by any means, or used for any purpose without written consent of Cummins Inc.

Sheet 4 of 14 Part Name: OUTLINE, GENSET Drawing Category: Detail State: Released

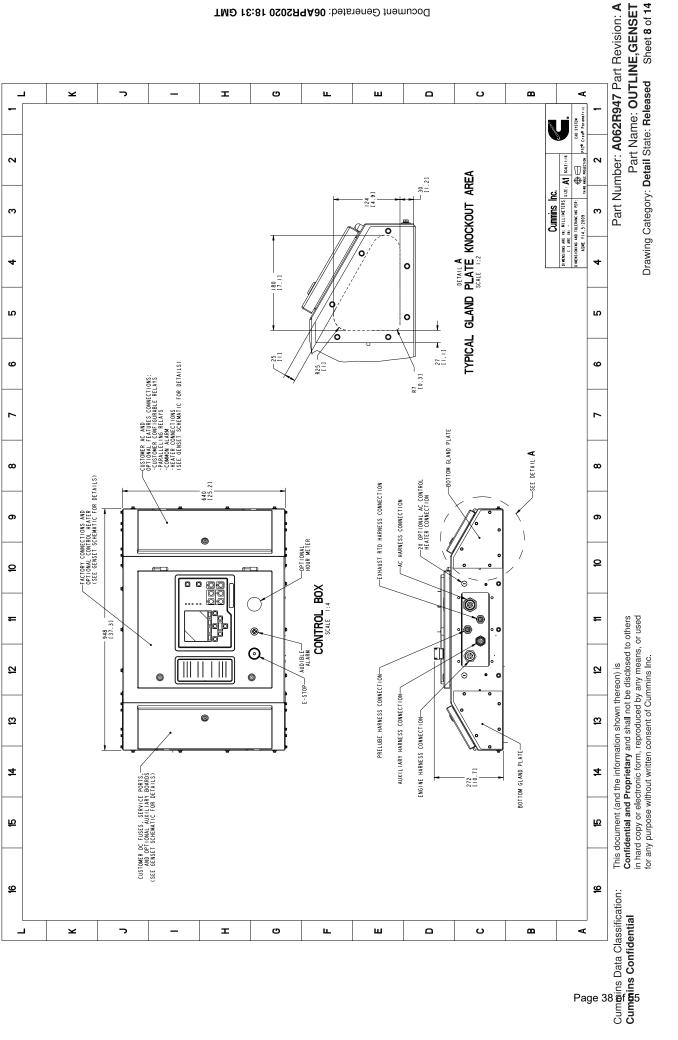

Part Name: **OUTLINE, GENSET** stail State: **Released** Sheet 8 of 14 Drawing Category: Detail State: Released

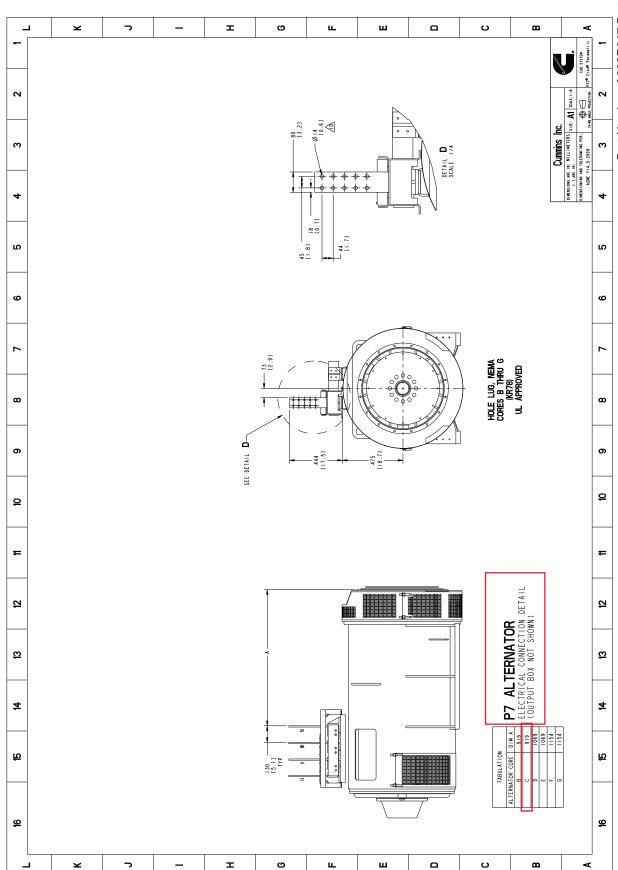

Part Name: OUTLINE,GENSET
Drawing Category: Detail State: Released Sheet 10 of 14 Part Number: A062R947 Part Revision: A

#### **Data Sheet**

# **Circuit Breakers**



#### **Description**

This data sheet provides circuit breaker manufacturer part numbers and specifications. The circuit breaker box description is the rating of that breaker box installation on a Cummins<sup>®</sup> generator. Please refer to the website of the circuit breaker manufacturer for breaker specific ratings and technical information.

#### **Applicable Models**

Engine	Models			
QSK23-G7	DQCA	DQCB	DQCC	
QST30-G5	DQFAA	DQFAB	DQFAC	DQFAD
QST30-G17	DQFAH			
QSK50-G5	DQGAE	DQGAF		
QSK50-G4	DQGAA	DQGAB		
QSK50-G8	DQGAS			
QSK60-G6	DQKAA	DQKAB	DQKAD	DQKAE
QSK60-G14	DQKAF			
QSK60-G17	DQKAM			

#### Instructions

- 1. Locate the circuit breaker feature code or part number and use the charts below to find the corresponding manufacturer circuit breaker catalog number.
- 2. Use the first letter of the circuit breaker catalog number to determine the "frame" of the breaker. If the first letter is an "N", use the second letter. Then follow the corresponding website link from the table below to find the breaker catalog number description.

Please refer to the catalog numbering systems page, which is given in the chart, to understand the nomenclature of the catalog number.

Frame		Catalog Number description pages
P and R	0612CT0101  http://www.schneiderelectric.us/en/download/document/0612CT0101/	16-17
L	<u>0611CT1001</u>	8-9
MasterPact NT/NW	http://www.schneiderelectric.us/en/download/document/0611CT1001/http://www.schneider-electric.us/en/faqs/FA231180/	Please refer to PLS007 Rev 25

http://products.schneider-electric.us/technical-library/

<sup>\*</sup>The following link may also be used to search specifically by the breaker part number or for the catalog name listed above.

3. Search the catalog by using the first 3 letters of the breaker catalog number and the first 5 numbers to find information such as trip curves, accessories, and dimensional details regarding the circuit breaker.

\*If the catalog number starts with "N", skip the N and begin your search with the second letter.


\*If the first 3 letters are "PJP," the search will not work. You will need to start with just "PJ" and use the description pages to obtain the information you are looking for on the "PJP."

#### **Example**

After finding your circuit breaker catalog number to be "PJL36120U33EACUKMOYB," navigate to the P-frame catalog by using the link provided.

Look at pages 16-17 of the pdf catalog to find the nomenclature of the breaker.

Search the P-frame spec sheet using the search "PJL36120."

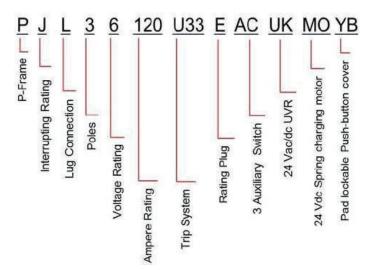


The following link is another way to decode the Schneider products

https://www.productinfo.schneider-electric.com/portals/ui/digest/viewer/561d5d65e4b0c5c41a243bf2/561d5f9ae4b0c5c41a24480c/r/ 17707021 83351# 17707021 83351# 33351# 17707021 83351# 3335

For decoding the ABB breakers, see the decoder sheet, titled "T8 Catalog number explanation"


power.cummins.com

			Mechanically operated breakers				
Feature Code	Breaker box description	Cummins part #	Engine	Manufacturer	Breaker catalog number	Trip unit	Plug type
CB-2500, Right,3P, UL600, IEC 415, UL Serv Ent,		0320-2164-01	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50-G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36250U31F	MicroLogic 3.0 LI	
	100%	A054K364	QSK19-G8, QSK23-G7		RLF36250U33F	MicroLogic 5.0 LSI	F
KP83-2	CB-2500A, Left, 3P, 600, IEC 415, UL Serv Ent,	(0320-2164-01)	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	(RLF36250U31F)	(MicroLogic 3.0 LI)	<b>6</b>
	(100%)	A054K364	QSK19-G8, QSK23-G7		RLF36250U33F	MicroLogic 5.0 LSI	
KP84-2	CB-2000, Right, 3P, UL 600, IEC 415, UL Serv Ent 100%	0320-2164-02	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36200U31F	MicroLogic 3.0 LI	F
	100/0	A054K366	QSK19-G8, QSK23-G7		RLF36200U33F	MicroLogic 5.0 LSI	
KP85-2	CB-2000, Left,3P, UL 600, IEC 415, UL Serv Ent, 100%	0320-2164-02	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36200U31F	MicroLogic 3.0 LI	F
	100%	A054K366	QSK19-G8, QSK23-G7		RLF36200U33F	MicroLogic 5.0 LSI	
KP86-2	CB-1600A, Right, 3P, UL 600, IEC 415, UL Serv Ent	0320-2164-03	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, 50L, 60L, QSK60-G6, QSK60-G11 QSK60- G14, QSK60-G18	Schneider Electric	RLF36160U31F	MicroLogic 3.0 Ll	F
	100%	A054K368			RLF36160U33F	MicroLogic 5.0 LSI	
KP87-2	CB-1600, Left,3P, UL 600, IEC 415, UL Serv Ent 100%	0320-2164-03	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36160U31F	MicroLogic 3.0 LI	F
	100/8	A054K368	QSK19-G8, QSK23-G7		RLF36160U33F	MicroLogic 5.0 LSI	
KP88-2	CB-1200, Right, 3P, UL 600, IEC 415, UL Serv Ent	0320-2183	QST30-G5, 30L QSK50-G4) QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	(PJP36120U31E)	(MicroLogic 3.0 LI)	•
		A054K408	QSK19-G8, QSK23-G7		PJP36120U33F	MicroLogic 5.0 LSI	
KP89-2	CB-1200, Left, 3P, UL 600, IEC 415, UL Serv Ent, 100%	0320-2183	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	PJP36120U31E	MicroLogic 3.0 LI	E
		A054K408	QSK19-G8, QSK23-G7		PJP36120U33F	MicroLogic 5.0 LSI	
KP90-2	CB-800A, Right, 3P, UL 600, IEC 415, UL Serv Ent 100%	0320-2182	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	PJP36080U31F	MicroLogic 3.0 LI	F
	100/0	A054K405	QSK19-G8, QSK23-G7		PJP36080U33F	MicroLogic 5.0 LSI	
KP91-2	CB-800A, Left, 3P, UL 600, IEC 415, UL Serv Ent, 100%	0320-2182	QST30-G5, 30L, QSK50-G4, QSK50-G5, QSK50- G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	PJP36080U31F	MicroLogic 3.0 LI	F
	100%		QSK19-G8, QSK23-G7		PJP36080U33F	MicroLogic 5.0 LSI	
KP92-2	CB-600A, Right,3P, UL 600, IEC 690, UL Serv Ent 100%	A044T468	QSK19-G8, QSK23-G7, 30L, QSK60-G4, QSK50-G5, QSK60-G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	NLGL36600U33X-600A	MicroLogic 3.3S LSI	N/A
KP93-2	CB-600A, Left, 3P, UL 600, IEC 690, UL Serv Ent, 100%	A044T468	QSK19-G8, QSK23-G7, 30L, QSK50-G4, QSK50- G5, QSK50-G7, QSK60-G6, QSK60-G11 QSK60- G14, QSK60-G18	Schneider Electric	NLGL36600U33X-600A	MicroLogic 3.3S LSI	N/A
KU62-2	CB-3000A, 3P, 600/690V, UL/IEC, ServEnt, 100%UL, Right	A029B150	QSK50-G5, QSK50-G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36300U31A	MicroLogic 3.0 LI	F
KU68-2	CB-3000A, 3P, 600/690V, UL/IEC, ServEnt, 100%UL, Left	A029B150	QSK50-G5, QSK50-G7, QSK60-G6, QSK60-G11 QSK60-G14, QSK60-G18	Schneider Electric	RLF36300U31A	MicroLogic 3.0 LI	F

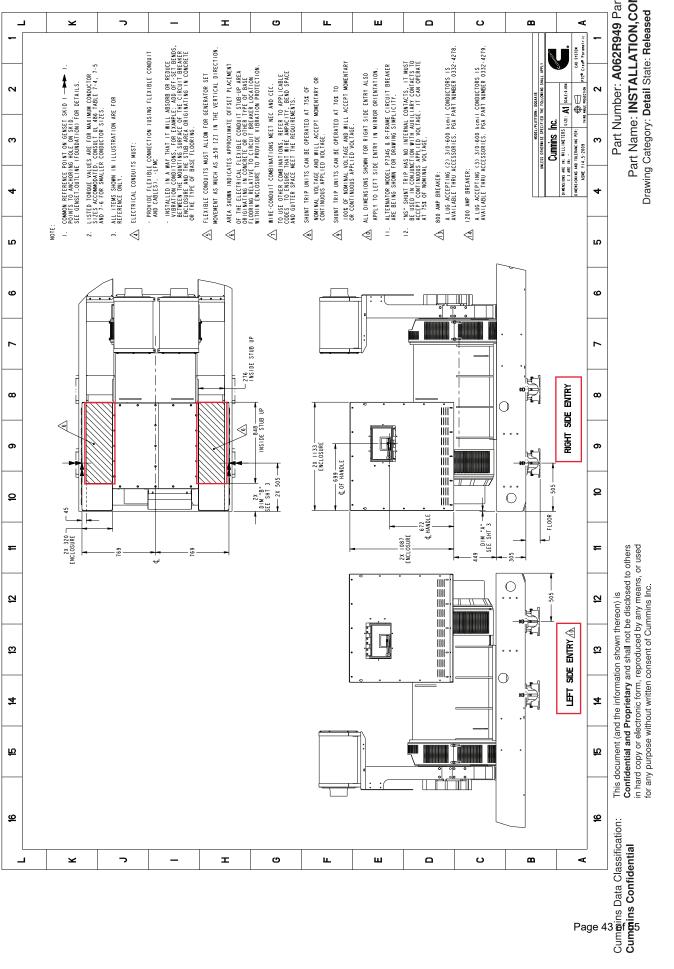

Part Number: A062R949 Part Revision: A Part Name: INSTALLATION, CONTROL BOX Drawing Category: Detail State: Released

Sheet 1 of 4

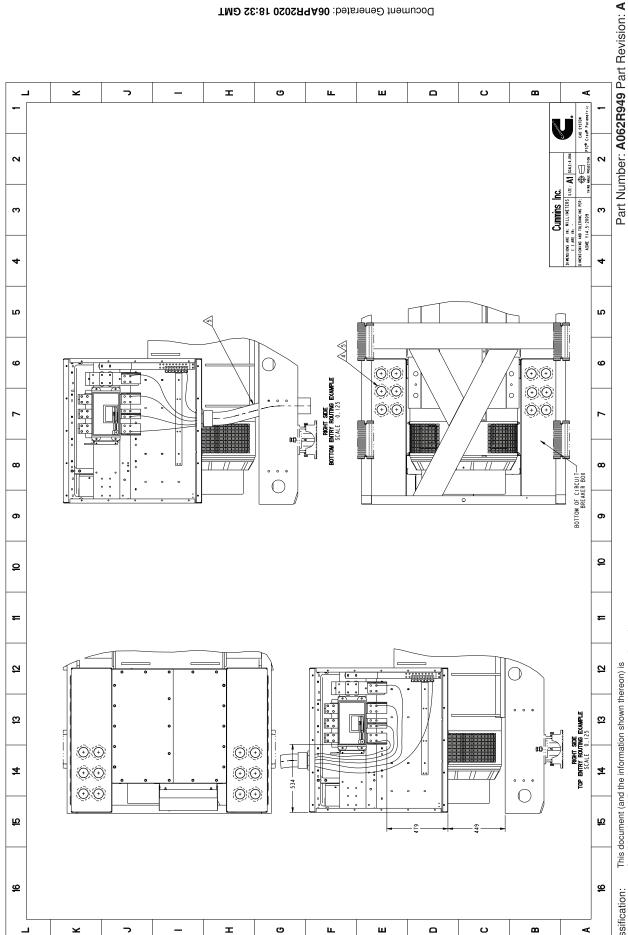


Part Name: INSTALLATION, CONTROL BOX Drawing Category: Detail State: Released Sheet 2 of 4

Document Generated: 06APR2020 18:32 GMT

_		×		7				I		9		ш		ш			<u> </u>		ပ		ω			⋖		9 E
• [	-		•		•		'													•		J. Committee	j	CAD STSEM PTC® Cred® Parametric	_	Part Number: A062R949 Part
																							SCALE: 0.094	MALE PROJECTION	7	mber: A
				2		2					s 0		2 12									Cummins Inc.	DINENSIONS ARE IN; MILLIMETERS SIZE: A	TOLERANCING PER: .5-2009 THIRD	ო	Part Number: A062R949 Part
				TABLE 2  CONDUIT AND WIRE SIZE BASED ON NEC 2008, ARTICLE 310.15 FEMPERATINE NATED CONDUITOR AT 30C AMBRICAT AND ANNEY C	LFMC)	NUMBER OF CONDUITS		4 4 6	2 0 0 0	2 1/2 2	TYPICAL CONDUIT AND WIRE SIZE BASED ON NEC 2008, ARTICLE 310.15 AND TABLE 310-16 AT 15C TEMPERATURE RATED CONDUCTOR AT 40C AMBIENT AND ANNEX C (LIQUID TIGHT FLEXIBLE METAL CONDUIT - LFMC)		MBER OF CONDUITS	3 1/2	m [	DIM "B"	569.8 [22.43] 569.8 [22.43]	420.8	420.8 [16.57] 325.8 [12.83]	325.8 [12.83]			DINENSIONS ARE IN	DIMENSIONING AND TOLERANCING PER: ASME T14, 5-2009	4	ď
				2 0 N NEC 2008,	TAL CONDUIT -	TOTAL	) O O L	0 00 00 0	2 2 2		ON NEC 2008, TURE RATED CON	-	-  0	· v 4 w .	- F	H	247.6 [9.75] 247.6 [9.75]	13.891	3.6 [.14]	3.6				-	വ	
				TABLE TABLE TRE SIZE BASED ATED CONDUCTOR	HT FLEXIBLE ME		W V	411 420 411 420 411 385	Ш	411 420 411 255 111 115	TRE SIZE BASED T 75C TEMPERAT LIQUID TIGHT F		<sup>∪</sup> ₹		AIL   273	TABLE 3 ALTERNATOR MODEL	□ P734B	D P7340	□ P734E	☐ P7346				_	9	
				CONDUIT AND W	(LIQUID TIG	WIRE (COPPER)	OTY SIZE 6 600 KCMIL	$\pm \pm \pm$	2 350 KCMIL 2 350 KCMIL 2 350 KCMIL	500 KCM     250 KCM	CONDUIT AND W BLE 310-16 A AND ANNEX C		<b>E</b> .	5 700 KCMIL 4 700 KCMIL 3 500 KCMIL	3 350 KC				\$ <b>(</b> 9	\				-	_	
				TYPICAL AT 750	3		AMPS 2500						BRKR AMPS		800	GENSET MODEL	O DFLB	O DFLC	Dogak						7	
			CONNECTION	COMPRESSION TERMINALS #20-16 AWG OR SMALLER TORQUE: 10 LB-1N		COMPRESSION TERMINALS #20-16 AMG OR SMALLER TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-14 AWG. TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-16 AWG. TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-14 AWG. TORGUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-16 AWG. TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-14 AWG. TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-16 AWG. TORQUE: 10 LB-1N	COMPRESSION TERMINALS FOR 1 OR 2 #18-14 AWG. TORQUE: 10 LB-IN	COMPRESSION TERMINALS FOR 1 OR 2 #18-16 AWG. TORQUE: 10 LB-1N											œ	
				COMPRES #20-16 TOROI					•		<	COMPRES FOR 1 OF TOROI													စ	
		TELCATIONS	INRUSH	7 401	Ø 401		200VA	0 vAC, 18 vDC, 250 vDC	200VA	0 VAC, 18 VDC, 250 VDC	200VA	0 VAC, 18 VDC, 250 VDC	200VA	0 VAC, 18 VDC, 250 VDC										-	<b>Q</b>	
		ACCESSORY SPEC	.			6A AT 240 VAC, 6A AT 480 VAC, 3A AT 600 VAC, 2.5A AT 48 VDC, 0.8A AT 125VDC, 0.3A AT 250 VDC		64 AT 240 VAC, 6A AT 480 VAC, 3A AT 600 VAC, 2.5A AT 48 VDC, 0.8A AT 125VDC, 0.3A AT 250 VDC		6A AT 240 VAC, 6A AT 480 VAC, 3A AT 600 VAC, 2.5A AT 48 VDC, 0.8A AT 125VDC, 0.3A AT 250 VDC		64 AT 240 VAC, 6A AT 480 VAC, 3A AT 600 VAC, 2.5A AT 48 VDC, 0.8A AT 125VDC, 0.3A AT 250 VDC		6A AT 240 VAC, 6A AT 480 VAC, 3A AT 600 VAC, 2.5A AT 48 VDC, 0.8A AT 125VDC, 0.3A AT 250 VDC										-		S
						6A AT 240 3A AT 600 1 0.8A AT 125		6A AT 240 3A AT 600 0.8A AT 125	·	6A AT 240 3A AT 600 1 0.8A AT 125		6A AT 240 3A AT 600 1 0.8A AT 125		6A AT 240 3A AT 600 ' 0.8A AT 125										-		ed to other
		TABLE 1	ACCESSORY DESCRIPTION	24 VDC SHUNT TRIP	24 VDC SHUNT TRIP	I EA. FORM C I AUX CONTACT + I TRIP ALARM	24 VDC SHUNT TRIP	I EA. FORM C I AUX CONTACT + I TRIP ALARM	24 VDC SHUNT TRIP	I EA. FORM C I AUX CONTACT + I TRIP ALARM	24 VDC SHUNT TRIP	I EA. FORM C 4 AUX CONTACT + I TRIP ALARM	24 VDC SHUNT TRIP	I EA. FORM C 4 AUX CONTACT + I TRIP ALARM										-	12	thereon) is t be disclos
			DIM D ±25 [1.0]		24 V	554 [21.8]	-	[23.5]		[21.8]		[19]		4 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4											ប	on shown
			WIRE RANGE D	#2-600 KCMIL [;		2/0-350 KCMIL [1]		3/0-500 KCMIL [1]				HOLE PATTERN		#2-600 KCMIL											4	the informati
		11 7150 11168	AMPS	3 OR 4 POLE #2		600A 3-POLE 27		800A 3-POLE 3/		W.WICROLOGIC 1200A 3-POLE 370-500 KCMIL 3.0 TRIP UNIT				Ē											ស	This document (and the information shown thereon) is Confidential and Proprietary and shall not be disclosed to others
			FRAME	SOUARE D	SOUARE	NSJ NSJ W/STR23SP TRIP UNIT	SOUARE D	W/MICROLOGIC 8	SQUARE D	/MICROLOGIC	SQUARE R 2500/2000/16	1600-2500 AMP BUS BARS STANDARD W/MICROLOGIC 3.0 TRIP UNIT	R 2500/200	ZZZ 1600-2500 AMP BREAKERS TOROUE 375 IN LBS [42 N												
_			907	0	+	0	<b>E</b>		000		K	_ <b>≩</b>													9	Cumpins Data Classification:
ı		×		7		_		I	/	ြ		` ш		ш		-	_		ပ		Δ.			4		Cumpins Data Classific

Part Name: INSTALLATION, CONTROL BOX Drawing Category: Detail State: Released Sheet 3 of 4 Part Number: A062R949 Part Revision: A

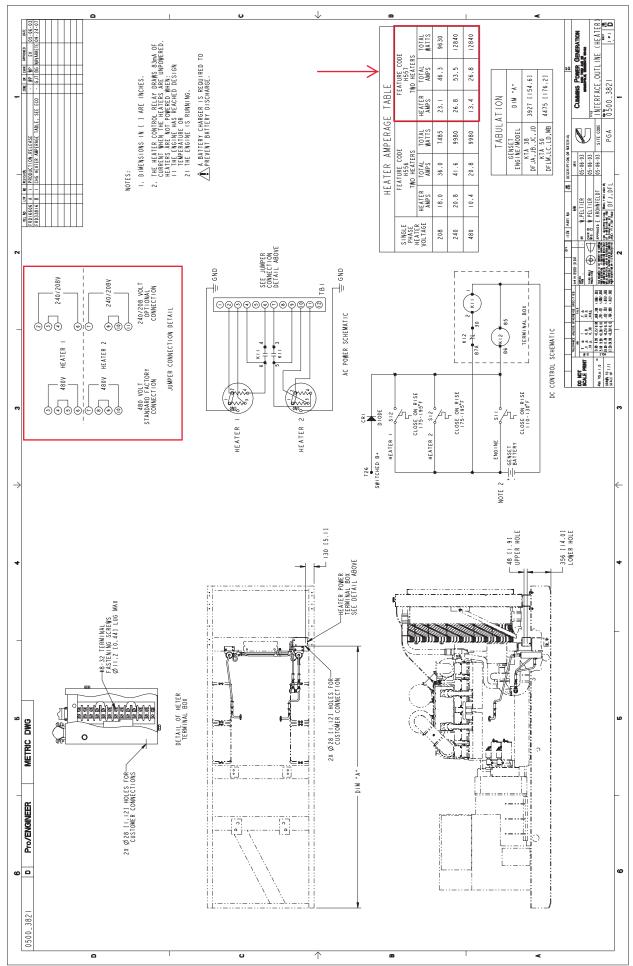



## **Battery Charger**

**A048G602** 10A 50/60 Hz

A051H785 20A 50/60 Hz

#### Description

Cummins Power Generation fully automatic battery chargers are constant voltage/constant current chargers incorporating a 4-stage charging algorithm. Designed for use in applications where battery life and reliability are important; these chargers, complete with built-in equalize charge capability, are ideal for stationary or portable starting battery charging service.

To achieve optimum battery life, a 4-stage charging cycle is implemented. The four charging stages are constant current, high-rate taper charge, finishing charge, and maintaining charge. During the constant current cycle the charger operates at maximum possible output in the fast charge mode. During the high-rate taper charge cycle the charger stays at fast charge voltage level until battery current acceptance falls to a portion of the chargers rated output. During the finishing charge cycle the charger operates at the float voltage and completes the battery charge. During the maintaining charge cycle the charger supplies only a few milliamps required by the battery to stay at peak capability.

An optional temperature sensor (A043D534) maybe used to adjust charging voltage based on temperature of the battery. Use of a battery temperature sensor helps to increase battery life by preventing over or under charging. The battery temperature sensor also protects the battery from overheating. Temperature compensation sensor is required for all applications when battery charger and battery are located in different temperature or battery heater is being used.

Battery chargers are field-configurable for charging either 12 or 24 VDC battery systems at 50/60 Hz operation. Simple jumper selectors enable selection of output voltage and battery type.



#### **Features**

**Protection** – Surge protected to IEEE and EN standards. All models include single pole cartridge type fuses mounted on the printed circuit board to protect against input or output overcurrent.

**Easy installation** – Clearlymarked terminal blocks and panel knockouts provide convenient connections of input and output leads.

**User display** — Output voltage and current, fault information and status are indicated on the front panel. Includes precision ammeter and voltmeter.

Monitoring – Status LED indicators are provided to show the condition of the charger. LED's on the right side of the monitor indicate operational functions for Temperature Compensation active (Green), AC on (Green), Float (Green) or Boost (Amber) mode, as well as Battery Fault (Red). LED's on the left side of the monitor illuminate (in Red) when Charger fail, High or Low VDC or AC fail occur.

Adjustable float voltage – Float voltage can be set, using easy to understand jumpers, for optimum battery performance and life.

**Construction** – NEMA-1 (IP20) corrosion resistant aluminum enclosure designed for wall mounting.


**Faults** – The charger senses and annunciates the following fault conditions: AC power loss, battery overvoltage, battery under voltage, battery fault conditions and charger failure. Includes an individual 30 volt/2 amp is olated contact for each alarm.

**Vibration resistant design** – complies with UL991 class B vibration resistance requirements.

**Listed** – C-UL listed to UL 1236 CSA standard 22.2 No 107.2-M89. Suited for flooded and AGM lead acid and NiCd batteries in generator set installations.

**Warranty** – 5 year CPG warranty.



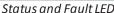



Field selectable jumper

#### **Specifications**

#### Performance and physical characteristics

Output:	Nominal voltage	12VDC* or 24VDC
	Float voltage – 12VDC batteries	12.87, 13.08, 13.31, 13.50*, 13.62, 14.30
	Float voltage – 24VDC batteries	25.74, 26.16, 26.62, 27.00*, 27.24, 28.60
	Equalize-voltage	6.5% above float voltage sensing
	Output voltage regulation	±0.5% (1/2%) line and load regulation
	Maximum output current	10 or 20 ampsnominal
	Equalize charging	Battery interactive auto-boost
Input:	Voltage AC	120, 208, 240 ±10%
	Frequency	60/50 Hz <u>+</u> 5%
Approximate ne	t weight:	10A: 25 lbs. (11.36 Kg) 20A: 50 lbs. (22.68 Kg)
Approximate dir	mensions: height x width x depth-in	10A: 12.50" x 7.66" x 6.50"(318x195x165 mm) 20A: 13.06" x 13.95" x 6.83"(332x354x173 mm)
Ambient tempera	ature operation: At full rated output	- 4°F to 104 °F (-20 °C to 45 °C)

#### Note:


- Battery charger comes with default settings of 12VDC and 13.50/27.00VDC float voltage and can be changed to the battery manufacture recommendations. Replacement printed circuit board and fuses are identified in the Owner's Manual (10A: A050S537 and 20A: A051X126) which resides in Quick Serve On-Line. Service parts can be purchased through the Memphis Distribution Center. The PC board replacement instruction sheet (10A: A052N073, 20A: A053W929) and service manual (A050D829) is also available.
- Installation and application must comply with "section 4.5.3 batteries and battery charger" of application guide T-030 (Liquid Cooled Generator Set Application Manual A040S369).

#### Caution:

- Higher input voltages (i.e. 480VAC or 600VAC) can be applied if a transformer with a 120VAC-240VAC output is installed. Higher input voltages (i.e. 480VAC or 600VAC) can be applied if a transformer with a 120VAC-240VAC output is installed. For voltages higher than 240 VAC, step-down transformer must be used. Review the respective Owner/Installation manual A050S537 for 10Amp and A051X126 20A chargers for supplier recommended step-down transformer requirements.
- 10Amp battery charger is recommended for genset applications with 1 or 2 factory provided batteries. 20Amp battery charger is recommended for Cummins Genset applications with 3 or 4 factory provided batteries. Please consider the auxiliary DC loads connected to the genset batteries and size this charger as per the T-030 application guide to prevent misapplication issues.
- Back feed to a utility system can cause electrocution and/or property damage. Do not connect generator sets to any building electrical system except through an approved device or after building main switch is open.
- For professional use only. Must be installed by a qualified service technician. Improper installation presents hazards of electrical shock and improper operation, resulting in severe personal injury and/or property damage.
- Use this charger for charging LEAD-ACID or LIQUID ELECTROLYTE NICKEL-CADMIUM batteries only. Do not use this battery charger for charging dry cells, alkaline, lithium, nickel-metal hydride, or sealed nickel-cadmium batteries that are commonly used with home appliances. These batteries may burst and cause injuries to persons and damage to property.
- Do not parallel these battery chargers with any other charging system.

Americas 1400 73rd Avenue N.E. Minneapolis, MN 55432 USA Phone: 763 574 5000 Fax: 763 574 5298 Europe, CIS, Middle East and Africa Manston ParkColumbus Ave. Manston Ramsgate Kent CT 12 5BF United Kingdom Phone 44 1843 255000 Fax 44 1843 255902 Asia Pacific 10 Toh Guan Road#07-01 TT International Tradepark Singapore 608838 Phone 65 6417 2388 Fax 65 6417 2399



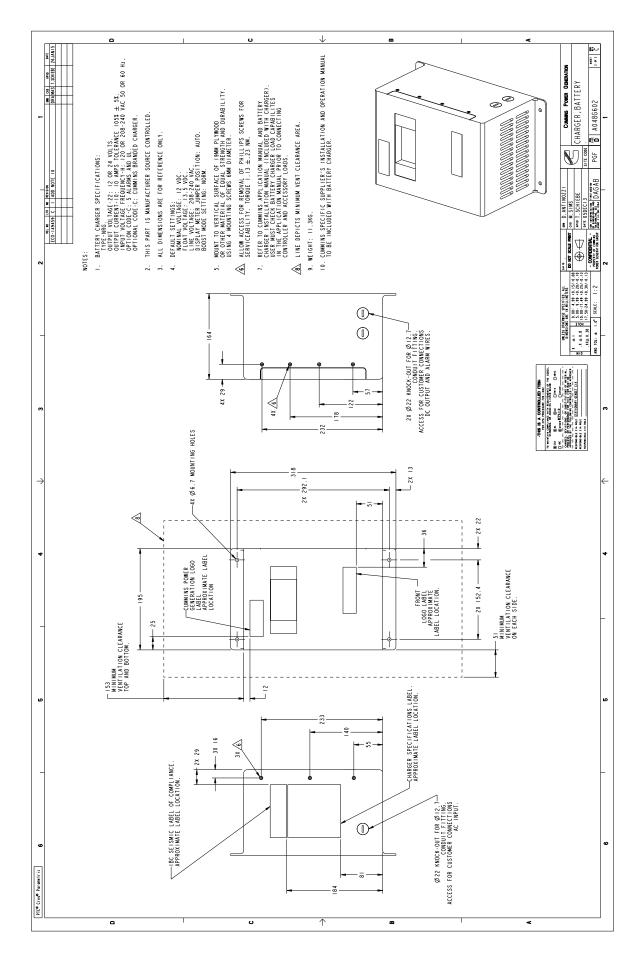



# PowerCommand® annunciator discrete input or PCCNet



#### **Description**

The Universal Annunciator Module provides visual and audible indication of up to 20 separate alarm or status conditions, based on discrete (relay) inputs or network inputs. Each LED can be controlled by either a discrete wire input or by a signal on the PCCNet network sent from an external device, such as a PCC1301 or PCC2100 (version 2.4 or later) control.

In addition to the LEDs, the annunciator can control four custom relays based on signals received over the PCCNet. When one of the annunciator's discrete inputs is activated, the annunciator will broadcast that information over the network. By taking advantage of the network, discrete inputs and custom relays, the annunciator can be used as expanded I/O for a genset controller.

Easily installed in a location to give immediate notification of an alarm or warning status. Designed to give operating/monitoring personnel quick-glance status information. The module directly senses battery voltage to provide green/yellow/red alarm and status information for that parameter.

Genset controller complies with NFPA level two requirements when used with the display but without the annunciator panel. When used with the annunciator it meets NFPA level one requirements (Emergency and Standby power systems). The annunciator module can also be used for monitoring of transfer switch or other equipment status.

#### **Features**

- Visual and audible warnings of up to 20 separate alarm or status conditions.
- LEDs can be controlled either via PCCNet or discrete input.
- Status of discrete inputs is broadcast on network.
- Four custom relays can be controlled over the PCCNet network.
- Configurable LED color (red, yellow or green) and selectable horn operation allows maximum flexibility.
- Standard NFPA 110 label, field configurable for other alarm status and conditions.
- Each audible alarm is annunciated, regardless of the number of existing alarm conditions displayed.
- Sealed membrane panel design provides environmental protection for internal components and is easy to clean.
- Configurable for negative (ground) input or positive input.
- Integral DC voltage sensing.
- Flush or surface mount provisions.
- UL Listed and labeled; CSA certified; CE and UKCA marked.

#### **Specifications**

#### Signal requirements

Positive - Input impedance is 1.82 kOhms to ground; maximum input voltage = 31 VDC.

Negative - Input impedance is 1.82 kOhms to Bat+: inputs are at Bat+ level when open.

Sink/source current threshold for detection - 150 Ua minimum, 3 mA maximum.

Typical conductor size: 16 ga for 304.8 m (1000 ft)

Max conductor size for terminal: 12 ga

#### Relay outputs

0.2 A at 125 VAC and 1 A at 30 VDC

#### **Network connections**

Use Belden 9729 two pair, stranded, shielded 24 AWG twisted pair cable for all PCCNet connections. Total network length cannot exceed 1219 m (4000 ft). Up to 20 nodes can be connected to the network.

Note: Any communications wire connected to the generator set should be stranded cable.

#### **Power**

Maximum consumption: 15 watts

#### **Battery voltage**

Functional range - Audible and visual conditions operational from 6.5 to 31 VDC.

Low voltage setting - 12.0 VDC for 12 Volt nominal systems; 24.0 for 24 Volt nominal systems.

High voltage setting - 16.0 Volt for 12 Volt nominal systems; 32.0 Volt for 24 Volt nominal systems.

#### Alarm horn

Sound level: 90 dB at 30 cm

#### **Physical**

Weight (with enclosure): 1.4 kg (3.0 lbs)

#### **Temperature**

-20 °C to +70 °C (-4 °F to +158 °F)

#### Humidity


10% to 95% RH (non-condensing)

#### **Default lamp configurations**

Can be configured for current NFPA 110 standard or as a replacement for Legacy (pre-2001) NFPA 110 annunciator (300-4510 or 300 4511)

	NFPA 110		
Description	Color	Horn	Flash
Customer fault 1	Green	No	No
Customer fault 2	Amber	No	No
Customer fault 3	Red	No	No
Genset supplying load	Amber	No	No
Charger AC failure	Amber	Yes	No
Low coolant level	Amber	Yes	No
Low fuel level	Red	Yes	No
Check generator set	Amber	No	No
Not in auto	Red	Yes	Yes
Generator set running	Amber	No	No
High battery voltage	Amber	Yes	No
Low battery voltage	Red	Yes	No
Weak battery	Red	Yes	No
Fail to start	Red	Yes	No
Low coolant temp	Red	Yes	No
Pre-high engine temp	Amber	Yes	No
High engine temp	Red	Yes	No
Pre-low oil pressure	Red	Yes	No
Low oil pressure	Red	Yes	No
Overspeed	Red	Yes	No
	Customer fault 1 Customer fault 2 Customer fault 3 Genset supplying load Charger AC failure Low coolant level Low fuel level Check generator set Not in auto Generator set running High battery voltage Low battery voltage Weak battery Fail to start Low coolant temp Pre-high engine temp High engine temp Pre-low oil pressure Low oil pressure	Color         Customer fault 1       Green         Customer fault 2       Amber         Customer fault 3       Red         Genset supplying load       Amber         Charger AC failure       Amber         Low coolant level       Red         Check generator set       Amber         Not in auto       Red         Generator set running       Amber         High battery voltage       Amber         Low battery voltage       Red         Weak battery       Red         Fail to start       Red         Low coolant temp       Red         Pre-high engine temp       Amber         High engine temp       Red         Pre-low oil pressure       Red         Low oil pressure       Red	DescriptionColorHornCustomer fault 1GreenNoCustomer fault 2AmberNoCustomer fault 3RedNoGenset supplying loadAmberNoCharger AC failureAmberYesLow coolant levelAmberYesLow fuel levelRedYesCheck generator setAmberNoNot in autoRedYesGenerator set runningAmberNoHigh battery voltageAmberYesLow battery voltageRedYesWeak batteryRedYesFail to startRedYesLow coolant tempRedYesPre-high engine tempAmberYesHigh engine tempRedYesPre-low oil pressureRedYesLow oil pressureRedYes

#### **Typical installation**

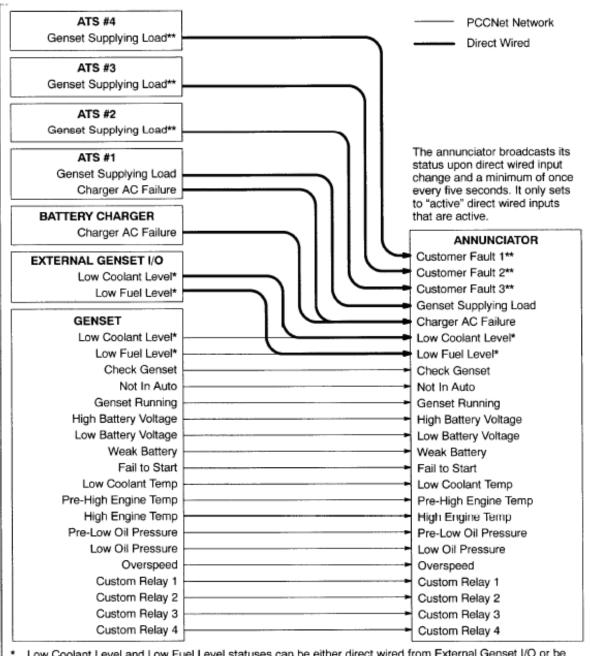


- Low Coolant Level and Low Fuel Level statuses can be either direct wired from External Genset I/O or be part of the PCCNet network status coming from the genset. If direct wired, then the annunciator sets the appropriate bit for the genset to reference.
- \*\* These can be Genset Supplying Load 2 thru 4 or Customer Faults.

When enabled, High Battery Voltage, Low Battery Voltage, and Normal Battery Voltage takes precedence over the hardwired input.

Normal Battery voltage can replace Weak Battery.

#### **Dimensions**

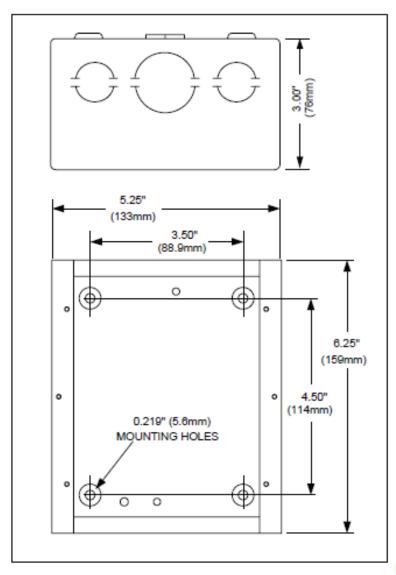

Dimensions: in (mm)

#### **Ordering information**

Part number	Description
0300-5929-01	Panel mount
0300-5929-02	Panel with enclosure

For more information contact your local Cummins distributor or visit power.cummins.com



#### Our energy working for you.™

# Limited Standby 3 Year or 900 Hour Parts + Labor + Travel Extended Warranty – L188

#### **Commercial Generating Set**

When purchased, this limited extended warranty applies to all Cummins Power Generation® branded commercial generating sets and associated accessories (hereinafter referred to as "Product").

This warranty covers any failures of the Product, under normal use and service, which result from a defect in material or factory workmanship.

#### **Warranty Period:**

The warranty start date is the date of initial start up, first rental, demonstration or 18 months after factory ship date, whichever is sooner. The coverage duration is 3 years from warranty start date or 900 hours, whichever occurs first.

Emergency Standby Power (ESP) is defined as the maximum power available during a variable electrical power sequence, under the stated operating conditions, for which a generating set is capable of delivering in the event of a utility power outage. The permissible average power output over 24 hours of operation shall not exceed 70% of the ESP.

# Cummins Power Generation® Responsibilities:

In the event of a failure of the Product during the extended warranty period due to defects in material or workmanship, Cummins Power Generation® will only be responsible for the following costs:

- All parts and labor required to repair the Product.
- Reasonable travel expenses to and from the Product site location.
- Maintenance items that are contaminated or damaged by a warrantable failure.

#### **Owner Responsibilities:**

The owner will be responsible for the following:

- Notifying Cummins Power Generation® distributor or dealer within 30 days of the discovery of failure.
- Installing, operating, commissioning and maintaining the Product in accordance with Cummins Power Generation®'s published policies and guidelines.
- Providing evidence for date of commissioning.
- Providing sufficient access to and reasonable ability to remove the Product from the installation in the event of a warrantable failure.

In addition, the owner will be responsible for:

- Incremental costs and expenses associated with Product removal and reinstallation resulting from non-standard installations.
- Costs associated with rental of generating sets used to replace the Product being repaired.
- Costs associated with labor overtime and premium shipping requested by the owner.
- All downtime expenses, fines, all applicable taxes, and other losses resulting from a warrantable failure.

#### Limitations:

This limited extended warranty does not cover Product failures resulting from:

- Inappropriate use relative to designated power rating.
- Inappropriate use relative to application guidelines.
- Failures due to normal wear, corrosion, varnished fuel system parts, lack of reasonable and necessary maintenance, unauthorized modifications and/or repair, and use of add-on or modified parts.
- Improper and/or unauthorized installation.
- Owner's or operator's negligence, accidents or misuse.
- Noncompliance with any Cummins Power Generation® published guideline or policy.
- Use of improper or contaminated fuels, coolants or lubricants.
- Improper storage before and after commissioning.
- Owner's delay in making Product available after notification of potential Product problem.
- Replacement parts and accessories not authorized by Cummins Power Generation®.
- Use of Battle Short Mode

#### Limitations Continued:

- Owner or operator abuse or neglect such as: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance to lubricating, cooling or air intake systems; late servicing and maintenance; improper storage, starting, warm-up, run-in or shutdown practices, or for progressive damage resulting from a defective shutdown or warning device.
- Damage to parts, fixtures, housings, attachments and accessory items that are not part of the generating set.

This limited extended warranty does not cover costs resulting from:

- Difficulty in gaining access to the Product.
- Damage to customer property.
- Repair of cosmetic damage to enclosures.

Items not covered by this limited extended warranty:

- Batteries
- Enclosures
- Coolant heaters
- Exhaust systems and aftertreatment components
- Maintenance items

www.cumminspower.com

## CUMMINS POWER GENERATION® RIGHT TO FAILED COMPONENTS:

Failed components claimed under warranty remain the property of Cummins Power Generation®. Cummins Power Generation® has the right to reclaim any failed component that has been replaced under warranty.

THE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS POWER GENERATION ® IN REGARD TO THE PRODUCT. CUMMINS POWER GENERATION® MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT IS CUMMINS POWER GENERATION® LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This limited extended warranty shall be enforced to the maximum extent permitted by applicable law. This limited extended warranty gives the owner specific rights that may vary from state to state or from jurisdiction to jurisdiction.

Product Model Number:	
Product Serial Number:	
Date in Service:	